 
 

 
 
 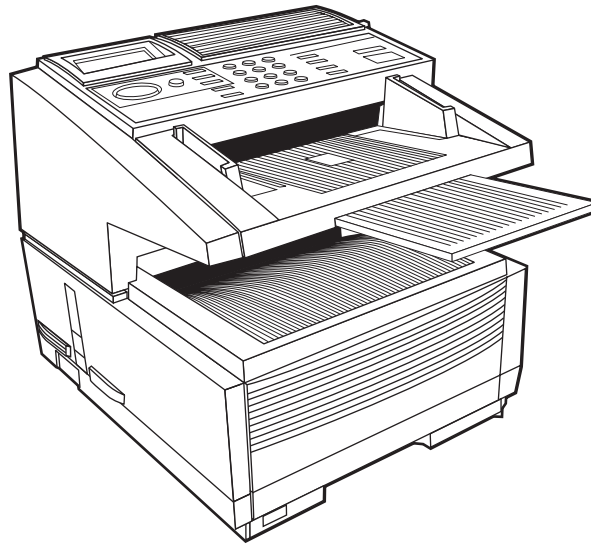




English



User's Guide



 
 


English

Every effort has been made to ensure that the information in this document is complete, accurate, and up-to-date. The manufacturer assumes no responsibility for the results of errors beyond its control. The manufacturer also cannot guarantee that changes in software and equipment made by other manufacturers and referred to in this guide will not affect the applicability of the information in it. Mention of software products manufactured by other companies does not necessarily constitute endorsement by the manufacturer.

Copyright © 2000. All rights reserved.

Energy Star is a trademark of the United States Environmental Protection Agency



This product complies with the requirements of the Council Directives 89/336/EEC (amended by 92/31/EEC) and 73/23/EEC (amended by 93/68/EEC) on the approximation of the laws relating to electromagnetic compatibility and low voltage.



Energy Star

As an Energy Star Partner, the manufacturer has determined that this product meets the Energy Star guidelines for energy efficiency.

 
 
 


Table of contents

Table of contents.	iii
Safety instructions.	xi
Notes, Cautions and Warnings	xiii

Chapter 1 - Introduction	1
Features	1
Product options	3
Component identification	4
Components	5
Control panel keys and indicators.	8
One-touch keypad	10
Using one-touch keys for dialling	10
Using one-touch keys for search	11
Using one-touch keys for programming	11
Second panel of one-touch keys (OKIFAX 5950 only)	12
Signal tones.	12

Chapter 2 - Functions	13
Menus and functions.	13
Menu level 1	13
Menu level 2	14
Menu level 3	14
Menu level 4	14
Accessing functions	15
Step access	15
Speed access	15

Chapter 3 - Installation	19
Getting started.	19
Where to install machine.	19
Unpacking	19
Setup	20
Inserting toner cartridge	20
Attaching document stacker	22
Connecting telephone line	22
Connecting external telephone/answering machine	23
Connecting power cable	24
Loading paper	24
Paper stacker settings	25

English

Clock adjustment	26
Fax ID	27
Machine settings	28
Answering modes	28
Setting answering mode	29
Dial/incoming call parameter settings	30
Dial parameters	30
Incoming call parameters	31
Other basic parameters	32
Paper size setting	32
Message confirmation report options	32
ISDN G4 option	33
Setting ISDN parameters	34
Connecting to a PBX	34
Setting PBX parameters	34
MFP PC interface kit	35
Network print kit	35
Internet fax and network printer/scanner	35
ISDN G4 board	36
G3 Dual line	36
Fax2Net (Internet)	36
 Chapter 4 - Directories and Basic Operations	37
Programming dialling directories	37
Speed dial numbers	37
Programming speed dial numbers	38
Chain dialling	39
Group dialling	39
Programming groups	40
Deleting entries	40
Dialling groups	40
Basic operations	41
Preparing documents	41
Document size	41
Multiple page documents	41
Loading documents	42
Faxing to a single location	42
Search key dialling	43
Real-time dialling	44
Redialling	44
Faxing to multiple locations	44
Message confirmation report (MCF)	45

Cancelling transmission	45
Manual receive mode	45
Receiving to memory	46
Printing from memory	46
No paper reception	46
No toner reception	46
Cancelling messages stored in memory	47
Unsolicited fax rejection	47
Power failures and memory	48
Making copies	48
Copying using ADF	48
Manual paper feeder	49
Face up and face down stacking	49
Counters	49
Accessing print/scan counters	50
Resetting image drum counter	50
Printer cleaning	50
 Chapter 5 - Advanced Operations	51
Delayed transmission	51
Sending delayed faxes	51
Delayed batch transmission	52
Cancelling delayed transmissions	52
Priority transmission	53
Confidential faxes	53
Sending confidential faxes	54
Receiving confidential faxes	54
Personal (confidential) mailboxes	54
Creating personal (confidential) mailbox	55
Changing password/closing mailbox	55
Changing password	55
Closing a mailbox	55
Printing confidential faxes	56
Relay broadcasting	56
Sending relay broadcasts	57
Initiating relay broadcasts	57
Programming relay report destination	58
Programming relay broadcast mailboxes	58
Creating relay broadcast mailboxes	58
Changing password/location/closing mailbox	58
Changing password	59
Changing location	59

English

Deleting a location	59
Closing a mailbox	60
Polling transmission/reception	60
Bulletin polling (box)	60
Creating bulletin polling mailboxes	61
Setting bulletin polling	61
Printing documents scanned into memory for bulletin polling ..	61
Memory polling	62
Memory polling (bulletin)	62
Document tray polling	63
Polling reception	63
Printing or cancelling faxes polled into memory	63
Call forwarding	64
Forwarding	64
Setting forwarding number	64
Setting Auto Answer mode to forward	64
Forwarding on paper or toner error	64
Dual access	65
During fax transmission	65
During fax reception	66
When making copies	66
When printing from memory	66
Internet fax	66
Fax2Net service	66
 Chapter 6 - Customising	67
Viewing current settings	67
Operation functions	67
Remote diagnosis	67
Transmission (TX) mode default	67
Memory full save	68
Instant dial	68
Restrict access	68
ECM function	68
Sender ID (ON/OFF)	68
Power save mode	69
Pulse dial rate	69
Pulse make ratio	69
Pulse dial type	69
T/F timer	69
CNG Count	69
Ring response	69

Distinctive ring	70
Changing operation functions	70
Memory password	70
Restricted access ID	71
Setting restricted access ID	71
Cancelling restricted access ID	71
Service function settings	72
Long document scanning/transmission (Long Doc. Scan)	72
MYD/DMY	72
Time/date print	72
TSI print	72
Options	72
Multifunction peripheral (MFP) PC interface kit	72
Internet fax and network printer/scanner	73
ISDN G4 board	73
G3 dual line function	73
600 dpi communication	73
FAX2NET service	73
 Chapter 7 - Reports	75
Understanding reports	75
Reports list	75
Message confirmation report	75
Confidential reception report	75
Broadcast entry report	76
Broadcast message confirmation report	76
Power outage report	76
Function list	76
Configuration	76
Telephone directory	76
Group directory	77
Activity report	77
Active memory files	77
Protocol dump	78
Help key printout	78
Printing reports	78
Codes used in reports	78
Result codes	78
Communication codes	79

English

Chapter 8 - Troubleshooting	81
Clearing document jams.	81
Clearing paper jams	81
Toner cartridge replacement	84
Image drum unit replacement.	86
Cleaning scanner path	88
Reading counters	89
Problem checklist	89
Display Error Messages	92
Packaging for transport	94
 Appendix A - Specifications and Function List	95
Specifications	95
User functions tree	96
 Appendix B - MFP PC Interface Kit	101
PC printer	101
PC scanner	102
PC fax modem	102
 Appendix C - Internet Fax and Network Printer/Scanner Kit	103
Ethernet compatibility	103
Novell	103
Microsoft	103
Network printer specifications	103
Internet fax and network scanner	103
Transmission.	104
Reception	104
Gateway function	104
E-mail to G3/G4 fax machine.	104
G3/G4 fax machine to E-mail.	104
Registration.	105
Primary user settings	105
Primary network settings	105
Display message examples	106
Setup procedure	106

Appendix D - ISDN G4 Board	107
Main specifications	107
G3 mode	107
G4 mode	108
Registration and important settings	108
Registration	108
Settings	109
ISDN dial mode (user setting)	109
ISDN dial mode (communication parameter)	109
Speech receive (user setting)	109
ISDN TSI/CSI	110
Other related functions	110
Display Message Examples	111
Explanation of displayed text	111
Bottom line of display (20 characters, left to right)	112
 Appendix E - G3 Dual Line Function	113
General information	113
Displays and reports	113
Settings	113
 Appendix F - 600 dpi Communication	115
 Appendix G - Network Compatibility List	117
 Appendix H - Fax2Net	119
Introduction	119
One-Touch keys	119
UNIQUE key	120
Features	121
International faxing	121
Fax to e-mail	121
Virtual e-mail	121
Web page retrieval	122
Prepaid card registration	122
Relay broadcast	122
Additional settings	123
Menu - facsimile network	123
Fax2Net server telephone number	123
Account number	123
International prefix	123

English

Programming Fax2Net settings	124
Dial directories	124
Programming One-Touch keys	124
Group registration	125
Programming	125
Telephone (fax) numbers	125
E-mail addresses	126
Web page URLs	126
Programmed dialling using numeric keypad	127
Web page print request	127
Broadcasting request	128
Registering prepaid card	128
Basic operations	128
Single location transmission	128
International destinations	128
Normal telephone service connection	129
PBX connection	130
Domestic long-distance calls	130
E-mail addresses	130
Broadcast transmission	131
Web page print	131
Prepaid card registration	132
PBX setting	132
Polling transmission	132
Function restrictions	133
Reports	134
Configuration report	134
Telephone directory	134
Activity report	134
Index	135

Safety instructions

This product has been carefully designed to give you years of safe, reliable performance. As with all electrical equipment, however, there are a few basic precautions you should take to avoid hurting yourself or damaging the product:

- Read the setup instructions in this manual carefully. Be sure to save it for future reference.
- Read and follow all warning and instruction labels on the product itself.
- Unplug the machine before you clean it. Use only a damp cloth; do not use liquid or aerosol cleaners.
- Place the machine on a firm, solid surface. If you put it on something unsteady, it may fall and be damaged; if you place it on a soft surface, such as a rug, sofa, or bed, the vents may become blocked, causing the machine to overheat.
- To protect the machine from overheating, make sure no openings are blocked. Do not put the machine on or near a heat source, such as a radiator or heat register. Keep it out of direct sunlight. Allow enough room around the machine for adequate ventilation and easy access.
- Do not use the machine near water, or spill liquid of any kind into it.
- Be certain that your power source matches the rating listed on the back of the machine. If you are not sure, check with your supplier or with your local power provider.
- This machine has an earthed, 3-pin plug as a safety feature, and it will only fit into an earthed outlet. If you can not plug it in, you probably have an older, non-earthed outlet; contact an electrician to have the outlet replaced. Do not use an adapter to defeat the earthing.
- To avoid damaging the power cable, do not put anything on it or place it where it will be walked on. If the cable becomes damaged or frayed, replace it immediately.
- If you are using an extension cable or power strip with the machine, make sure that the total current (amperes) required by all the equipment on the extension is less than the extension's rating.

English

The total ratings of all equipment plugged into the outlet should not exceed 15 amperes.

- The power outlet into which you plug your machine must remain accessible at all times.
- It is recommended that the machine be switched off prior to opening or removing covers.
- Lifting the top cover may expose hot surfaces. Hot surfaces are clearly labelled. Do NOT touch them.
- Do not poke anything into any ventilation slots; you could receive an electrical shock or cause a fire.
- Apart from the routine maintenance described in the accompanying documentation, do not try to service the machine yourself; opening or removing covers may expose you to shocks or other hazards.
- Do not make any adjustments other than those outlined in the manual as you may cause damage requiring extensive repair work.

If anything happens which indicates the machine is not working properly or has been damaged, unplug it immediately and contact your supplier. These are some of the things to look for:

- The power cable or plug is frayed or damaged.
- Liquid has been spilled into the machine, or it has been exposed to water.
- The machine has been dropped, or the cabinet is damaged.
- The machine does not function normally when you are following the operating instructions.

Machine Noise Information Ordinance 3. GSGV 18.1.1991:

The maximum sound pressure level is equal or less than 70 dB (A) according to ISO 7779.



English

Notes, Cautions and Warnings

 
 
 
Note: *A note appears in this manual like this. A note provides additional information to supplement the main text which may help you to use and understand the product.*

Caution:

A caution appears in this manual like this. A caution provides additional information which, if ignored, may result in equipment malfunction or damage.






WARNING

A WARNING APPEARS IN THIS MANUAL LIKE THIS. A WARNING PROVIDES ADDITIONAL INFORMATION WHICH, IF IGNORED, MAY RESULT IN A RISK OF PERSONAL INJURY.





English

     

Chapter 1 - Introduction

This plain-paper fax machine utilises advanced light-emitting diode (LED) technology for quick and trouble-free transmission/reception of data and images. In addition to the abundant standard features common to our range of fax machines, we now offer a number of optional devices which expand machine functions and further support your communications needs. These options include MFP (multi-function peripheral) PC interface kit, Network Print Kit including fax to e-mail), Internet Fax, ISDN G4 board and a G3 Dual Line.

Although the ISDN G4 board is an optional feature, it must be ordered from the supplier and cannot be installed by the user. If installed in the fax machine, most parameters will be dealer set to ensure simplified operation. There are, however, a few items that must be set by the user in accordance to the region of product use and user specifications: ISDN TID, ISDN Sub No., ISDN Dial Mode, and Speech Receive.

The G3 Dual Line board is also an optional feature, but this too must be ordered from the supplier and cannot be installed by the user.

Features

The following is a summarised list of the many standard features offered by your new fax machine:

- **User friendly control panel.** Special programming keys, 40-key plate for pre-programmed telephone numbers, 10-key pad for standard dialling and programming, and more.
- **80-character LCD (4 rows × 20 characters).** Easy to read display for operation guidance, clock display, function information, etc.
- **Automatic document feeder (ADF).** Capacity of up to 50 sheets of recommended letter/A4 paper.
- **Speed dialling.** Set up to 40 (OKIFAX 5750) or 80 (OKIFAX 5950) pre-programmed telephone numbers for automatic one-touch faxing, as well as an additional 100 (OKIFAX 5750) or 150 (OKIFAX 5950) numbers for 2- or 3-digit speed dialling.

English

- **Group dialling.** Create as many as 20 groups of telephone numbers and send documents to multiple locations with a single selection (broadcast faxing).
- **Automatic alternate call.** Dials a second (alternative) telephone number if the number originally dialled is busy.
- **Alphanumeric telephone directory.** Search for programmed telephone numbers by name.
- **33.6 Kbps transmission rate.** Fast, efficient communications.
- **Large-capacity memory.** 2.5MB (OKIFAX 5750) or 4.5MB (OKIFAX 5950).
- **Half-tone transmission.** Half-tone area of the document is processed with 64-scale gradation.
- **Advanced transmission and reception functions.** Includes delayed transmission, broadcasting (multi-location transmission), confidential message transmission/reception, relay broadcasting, polling, etc.
- **Automatic redial and page re-transmission.** Ensures document transmission when a telephone number is busy or a problem occurs in the communications process.
- **Advanced memory transmission/reception features.** A number of convenient features including automatic reception into memory without printing (e.g. ideal for reception of confidential communications).
- **Dual-access operations.** Allows two tasks to be conducted at once (e.g. scan and prepare a document for transmission while another document is being received).
- **Power saving.** Power supply unit realises energy savings through low power consumption - only 0.5W in standby state. Not available or effective if internet fax, network print/scanner kit or MFP are installed.
- **Automatic answering mode detection.** Distinguishes between incoming fax and voice communications, allowing the use of an answering machine on the same telephone line.
- **Closed network.** Prevents the reception of unsolicited communications.
- **Fax forwarding.** Document can be forwarded to a designated location after being stored in memory. Setting can also be used to forward a document when the local fax machine is out of toner or paper.

- **No paper reception.** Allows continued reception of documents when toner or paper runs out by storing data not yet printed in the memory of the fax machine.
- **Polling.** Allows the transmission and reception of documents from remote fax machines with polling capabilities.
- **Copier function.** Make up to 99 copies of a document at one time.
- **Progress reports.** Enable tracking of transmission status, machine operations, settings and maintenance requirements.

Product options

The following are optional devices which can be purchased to expand the functions of your fax machine:

- **Second paper tray.** Increases paper holding capacity by 500 sheets (universal size: legal, letter, A4).
- **Expanded memory.** Adds more memory to increase storage capacity. Available in 2.0, 4.0 or 8.0 Mbyte boards.
- **Telephone handset.** Connects directly to the machine and operates like a standard telephone. Handset should not be connected when ISDN G4 board is installed.
- **MFP PC interface kit.** Installation of MFP software (hardware provided as standard feature) enables a machine to operate as a multi-function peripheral (MFP) providing printer, scanner and fax modem capabilities when connected to a personal computer. (For further details, please refer to Appendix B.)
- **Network print kit.** Gives the option of utilising the Network Print Service and Fax to E-mail function via a local area network (LAN). (For further details, please refer to Appendix C.)
- **ISDN G4 board.** Enables machine to operate over ISDN circuits in G4 mode at ITU-T G4 specifications while maintaining communications capability with G3 fax machines. This option is supplier installed. (For further details, please refer to Appendix D.)
- **G3 dual line.** Installation of this option enables two lines to be used concurrently. This option is supplier installed. (For further details, please refer to Appendix E.)

English


- **600 dpi communication.** Allows the sending, receiving and copying at a resolution of 600 dpi (dots per inch). Can only be used if the optional 8 Mb of memory is installed. (For further details, please refer to Appendix F.)


Component identification

Your new fax machine package should contain the following items:

1. Fax machine main unit
2. Toner cartridge
3. Image drum unit (inside main unit)
4. User's Guide (this manual)
5. Document stacker
6. AC power cable
7. Telephone line cable

If anything appears missing or damaged please contact your supplier as soon as possible.

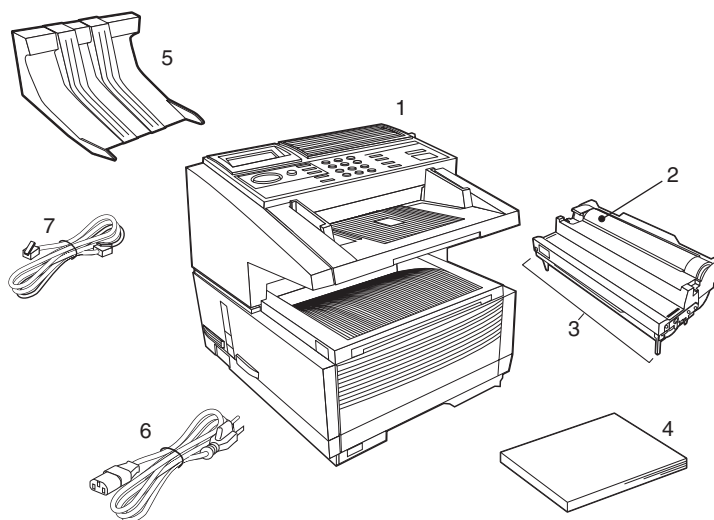


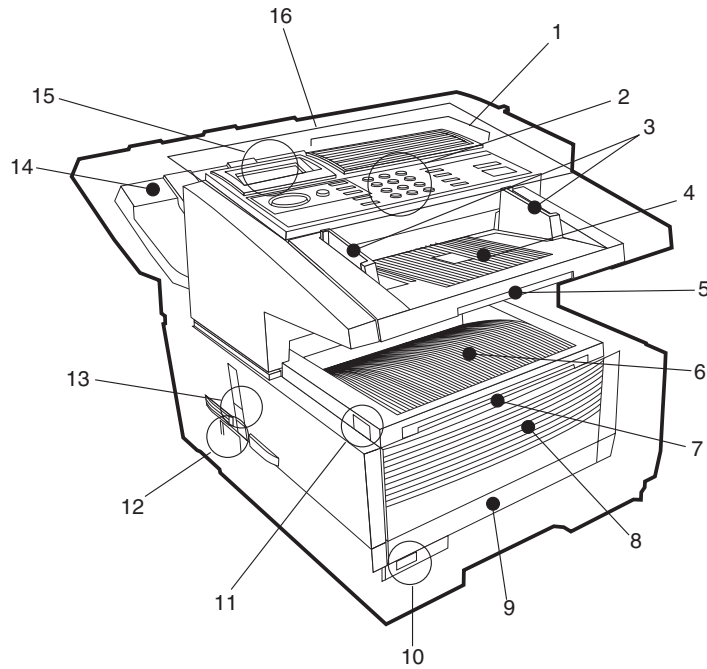


Components

1. **One-touch Keypad** - Use for one touch dialling of preprogrammed telephone numbers and entering alphanumeric and special characters, etc for programming, ID entries and writing e-mail messages..
2. **Numeric Keypad** - Use to enter telephone numbers, program information, manual dialling, etc.
3. **Document Guides** - Adjust guides to the width of documents to be faxed or copied.
4. **Document Tray** - Holds documents to be faxed or copied (above copy stacker tray).
5. **Document Tray Extension** - Pullout extension for supporting long documents.
6. **Copy Stacker** - Holds document copies after copying process.
7. **Copy Stacker Extension** - Pullout extension for supporting long documents.

English

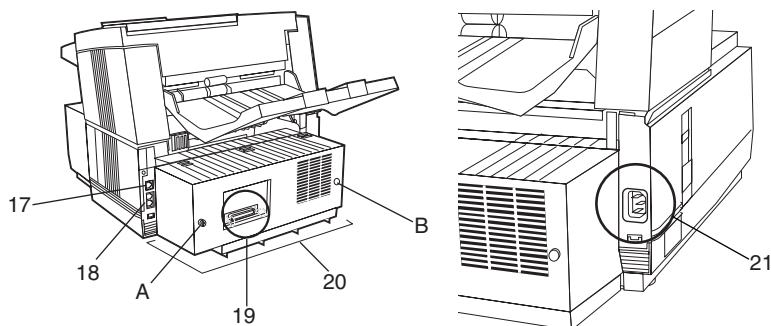

8. **Front Panel** - Fold out for access to manual paper feeder (bypass paper tray) when needing to feed different types of paper directly into the machine.
9. **Paper Tray** - Holds 250 sheets of paper (universal type: legal, letter, A4).
10. **Paper Indicator** - Indicator to show level of paper remaining in paper tray.
11. **Release Button** - Two buttons, one on each side, must be pressed to gain entry to toner and image drum area.
12. **Power Switch** - Press **I** to turn on and **O** to turn off.
13. **Copy Output Lever** - In the up position, copies will exit the machine facedown; in the down position, copies will exit face up. However, use in the "face up" position is only possible when copying or when using Network Print or PC Print.
14. **Document Stacker** - Holds original documents after being faxed or copied.
15. **Display Panel** - Shows status of machine and operation in progress.
16. **Control Panel (Programming Keys)** - Main keys used for programming machine settings and operations.
17. **Line Jack** - Jack for connection to main outside telephone line.
18. **TEL Jacks 1 (upper) and 2 (lower)** - Jacks for connecting optional telephone handset, external telephone or answering machine.
19. **IEEE-1284 Parallel Port** - Standard hardware for connection to personal computer and operation of MFP (multi-function peripheral) features.

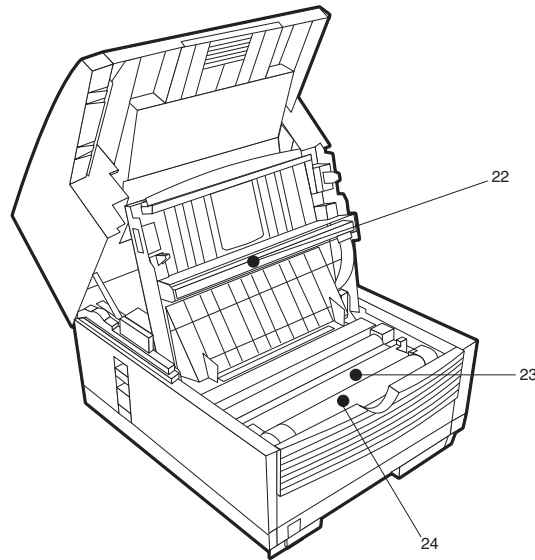


20. **Rear Cover** - Remove this cover to expose the expansion slots for optional memory, ISDN board and network interface card. Use a Phillips screwdriver to remove screws A and B. DO NOT remove any other screws. Once you have installed the peripheral equipment, reattach the rear cover, securing it tightly with screws A and B.
21. **AC Power Socket** - Plug the AC power cable supplied with the unit into this socket.
22. **LED Print Head** - This black bar is the transfer mechanism that writes received/copied information to the image drum. The print head should be cleaned each time the toner cartridge is changed.
23. **Image Drum Unit** - The image drum unit contains a photosensitive drum (green in colour) which receives information from the LED print head and transfers it to the printing paper. (*Only image drums specified for use in this machine and available from your authorised supplier should be installed.*)
24. **Toner Cartridge** - This black cylinder, installed on the upper section of the image drum unit, contains the black powder used as the machine's ink for printing data. Install a new toner cartridge when prompted by a message on the display panel. (*Only toner cartridges specified for use in this machine and available from your authorised supplier should be installed.*)

English

Control panel keys and indicators

1. **LCD panel:** Shows instructions and information while the machine is operating, or when entering information or changing settings.
2. **Shift (▲▼◀▶) keys:** Use these keys to move up, down, left or right within the menu system or left/right when entering or editing information.
3. **ALARM indicator:** This indicator light will illuminate and an alarm will sound to notify you if problems occur. To turn off the alarm indicator, press the STOP key and correct the problem.
4. **ENTER key:** Use this key to determine/register a menu option or setting, determine the location of a broadcast operation, display the results of a transmission or print-out a Message Confirmation Report when the machine is in the standby mode with no document set in the document tray.
5. **HELP key:** Press this key to print out a function list and instructions on how to carry out the most likely used features on the machine.
6. **RESOLUTION key** (PHOTO, EXFINE, FINE, STD indicator lights): Use this key to set the desired resolution of the fax/copy after loading your document. Use the PHOTO setting when the original document includes half-tone images.
7. **TYPE OF ORIGINAL key** (DARK, NORMAL, LIGHT indicator lights): Use this key to set the contrast after loading the document.

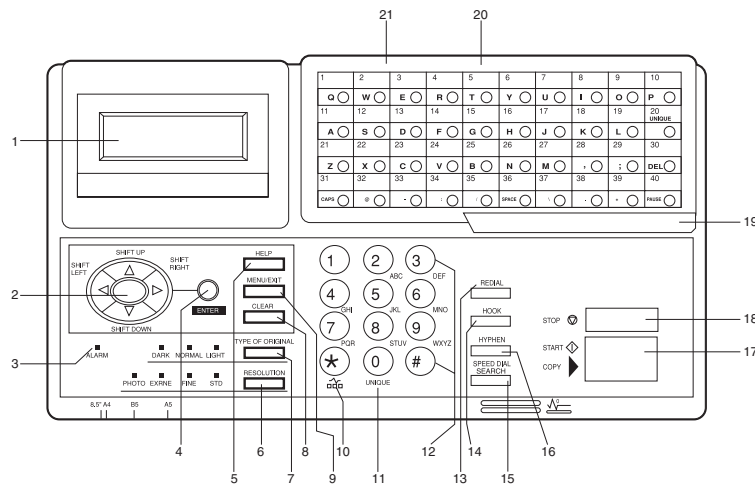

- Use LIGHT for originals that are too light, NORMAL for originals with good contrast, and DARK for originals that are too dark.
8. **CLEAR key:** Use this key to cancel ID, telephone number and programming entries.
 9. **MENU/EXIT:** Use this key when the machine is in standby state to activate the Menu mode. When Menu mode is activated, press this key to exit the mode and return to the standby state.
 10. ***/TONE key:** If the machine is set for pulse dialling, pressing this key will switch from pulse to tone dialling during the current call. This key can also be used during programming to create numbers with mixed pulse-tone operation. *(Due to local regulations, this key may not be available in some countries.)*
 11. **0/UNIQUE key:** Use this key as “0” when dialling telephone numbers. When programming the Sender ID, Location ID, etc., use this key to enter unique characters (symbols and various European alphabetic characters).
 12. **Numeric keypad:** These 12 keys work like the keypad on a standard telephone when dialling a telephone number. They are also used when programming the machine, and to input speed dial numbers after pressing the SPEED DIAL key. The “#” key is used for selecting pre-programmed groups of telephone numbers for group dialling (broadcasting).
 13. **REDIAL key:** Press this key to automatically redial the last telephone number dialled on the machine.
 14. **HOOK key:** Use this key to open the telephone line for manual dialling with the numeric keypad or external telephone handset. After pressing this key, it will be possible to hear the dial tone and dialling code through the machine’s speaker.
 15. **SPEED DIAL/SEARCH key:** After loading a document, press this key and then enter the programmed Speed Dial (One-Touch or 2- or 3-digit) number for the location. The speed dialling function will automatically dial the telephone number and transmit the fax. After pressing the SEARCH key, it is possible to search corresponding location IDs when alphanumeric characters are entered. The SPEED DIAL key can also be used with the # key and numeric keypad for group dialling.
 16. **HYPHEN key:** Use this key as the “-” character when programming ID and PBX, public line, international telephone or Earthing/

English

Flashing switches. It is also used to type the “+” (for international numbers) when entering TSI/CSI numbers.

17. **START/COPY key:** Use this key to initiate transmission of a document after loading the document and selecting the location, start manual fax transmission or reception, return the machine to normal operation from the Power Save mode, or start the copying function.
18. **STOP key:** Use this key to cancel the operation shown on the display, cancel the transmission of a fax (press twice within 3sec) or to cancel an alarm (ALARM indicator light will illuminate). After loading paper or installing a new toner cartridge or image drum unit, press this key to cancel the alarm condition. It can also be used to return to higher operational levels when programming the machine.
19. **One-touch keypad latch to second panel (OKIFAX 5950 only):** Lift this latch to reveal a second panel of one-touch keys.
20. **One-touch keypad:** For a detailed description of the One-touch keypad functions, please refer to the next section.
21. **One-touch labels:** After programming a telephone number into a One-touch key, write the name of the location on the label for the One-touch key. Remove the plastic covering the label, write the name using a pencil, and then replace the cover.

One-touch keypad

The one-touch keypad is the fax machine's most convenient tool. Use these keys for quick, one-touch dialling and programming of other machine operations. You can also assign telephone numbers (up to 40 digits each) to a one-touch key, and alphanumeric names of up to 15 characters in length.

Using one-touch keys for dialling

To use one-touch keys for dialling, after the telephone number(s) for the key have been programmed (see Programming Dialling Directories in Chapter 4), simply load the document to be faxed and press the key for the location where the fax is to be sent. Two telephone numbers can be programmed for each one-touch key, a primary number which is always dialled first, and an alternate number which is automatically dialled if the first number is busy or the call is not answered.

1	2	3	4	5	6	7	8	9	10
Q ○	W ○	E ○	R ○	T ○	Y ○	U ○	I ○	O ○	P ○
11	12	13	14	15	16	17	18	19	20 UNIQUE
A ○	S ○	D ○	F ○	G ○	H ○	J ○	K ○	L ○	○
21	22	23	24	25	26	27	28	29	30
Z ○	X ○	C ○	V ○	B ○	N ○	M ○	, ○	; ○	DEL ○
31	32	33	34	35	36	37	38	39	40
CAPS ○	@ ○	- ○	: ○	/ ○	SPACE ○	\ ○	· ○	+ ○	PAUSE ○

Using one-touch keys for search

After pressing the SEARCH key, use these keys to make an alphabetical search for names of telephone numbers previously programmed.

Using one-touch keys for programming

The one-touch keys are also useful for programming names and telephone numbers in the machine's memory. In addition to the alphanumeric keys, a number of special keys are provided for programming convenience:

Alphabet keys (one-touch keys #1 to #27, except #20): When programming the Sender ID or Location ID, use these keys to enter alphabet characters.

Unique key (one-touch key #20): Use the same as the "0" of a 10-keypad, and for entering symbols and special European alphabetic characters.

DEL key (one-touch key #30): Use this key to delete characters at the position of the cursor in the display panel when entering ID, telephone numbers or programming functions.

CAPS Key (one-touch key #31): Use this key to switch between uppercase and lowercase when entering alphanumeric characters.

SPACE key (one-touch key #36): Use this key to enter spaces when programming the machine. Unlike the PAUSE key, spaces provide easier reading only and have no effect on dialling characteristics.

PLUS (+) key (one-touch key #39): Each fax number entered or programmed into the machine can be up to 40 digits long. If there is a need to dial a number longer than 40 digits, it is possible to dial the number using any combination of Speed Dial numbers or the numeric keypad. To enter a chain dial number into a Speed Dial number, press the PLUS key at the 40th position of the first part of the number to indicate it is a chain

English

dial number, then complete the process by following the procedures required for entering another Speed Dial number (in which the second part of the number should be entered).

PAUSE key (one-touch key #40): Use this key to enter automatic 3-second pauses in dialling when programming telephone numbers. For example, use this key to tell the machine to wait for an outside or international line to open. Pauses in a telephone number dialling sequence are indicated by a "P".

Other: Special character keys (, ; @ _ : / \ . +).

Second panel of one-touch keys (OKIFAX 5950 only)

To access the second panel of one-touch keys (41-80) grasp the latch at the bottom of the keypad and lift up on the main panel, swinging it up and to the rear. After pressing the desired key(s), close the panel.

Signal tones

The machine emits a number of sounds to inform the user of specific conditions.

Key select tone - This is a short beep emitted each time a key is pressed.

Error tone - If an inappropriate key is pressed, the machine will emit three short beeps. If there is a problem with operations during communication, the machine will emit five long beeps. Press the STOP key to turn the error tone off and then print a Message Confirmation Report to check the source of the problem. To do this, press the ENTER key twice in succession with no documents loaded.

End of session tone - At the end of each successful faxing session, the machine will emit a long beep to confirm that there were no errors or problems in the communication.

Off-hook alarm tone - If the machine is equipped with a telephone handset and if the receiver of the handset is left out of the cradle when not in use, the machine will emit an intermittent warbling sound. To turn off the alarm, replace the handset in the cradle.

Chapter 2 - Functions

The programming keys on the left side of the control panel are designed to provide simple operation of the numerous functions provided by the machine. The following offers a brief explanation of how to use these keys.

Menus and functions

The programming menu system is designed in a tree like structure with four different levels. The MENU/EXIT, ENTER, and the four SHIFT keys (▲▼◀▶) keys allow navigation up and down the menu, and left or right to different levels for selecting functions and their settings.

The type of functions displayed in the menus depends on whether or not a document is loaded in the document feeder. If there is no document loaded, the menu of functions for operations not related to the actual sending of documents are shown. (Pressing ▲ key will switch to the menu of functions for operations related to the actual sending documents). If a document is loaded in the document feeder, the menu of functions for operations related to the actual sending of documents are shown. (Pressing ▼ key will switch to the menu of functions for operations not related to the actual sending of documents.)

Menu level 1

When first switched on, the machine will wait in standby mode, showing the time, machine mode and amount of memory available. By pressing MENU/EXIT, the machine will enter the menu at level 1.

To navigate this layer:

- ▲ or ▼: move cursor up or down to the desired function
- ◀ or STOP: return to standby mode
- ENTER or ▶: enter menu level 2 for the function indicated

Note: If LCD indicates that the fax machine is in power save mode, press START first before pressing the MENU key.

English

Menu level 2

At this level up/down navigation is only possible within the function selected at level 1. To move to a completely different function category press the ◀ or STOP key to move back to level 1 and then use the ▲ and ▼ keys to move up or down the menu level to the required function.

To navigate this level:

- | | |
|-------------|--|
| ▲ or ▼: | move cursor up or down to the desired function |
| ◀ or STOP: | return to level 1 |
| ENTER or ▶: | enter menu level 3 for the function indicated |

Menu level 3

This level lists functions or settings specific to the function chosen at level 2.

To navigate this level:

- | | |
|-------------|--|
| ▲ or ▼: | move cursor up or down to the desired function |
| ◀ or STOP: | return to level 2 |
| ENTER or ▶: | enter menu level 4 for the function indicated |

Menu level 4

Where a further level of detail is required, level 4 lists functions and settings specific to the function chosen at level 3. If there is a number to the left of the function title, the function can be accessed by a shortcut entry (see "Speed Access" later in this chapter).

To navigate this level:

- | | |
|-------------|---|
| ▲ or ▼: | move cursor up or down to the desired function |
| ◀ or STOP: | return to level 3 |
| ENTER or ▶: | determines or registers the function or setting indicated and returns to the menu options in level 3 or to standby mode |

Note 1: Pressing the STOP key at any time will return to the preceding level.

Note 2: Pressing MENU/EXIT at any time during the programming process will exit from the menu system and return the machine to standby mode.

Accessing functions

There are two methods for accessing functions: step access and direct (speed) access.

Step access

To access functions in a stepwise manner, the procedure is similar to navigating the menu levels. Begin by pressing MENU/EXIT, and then use the programming keys to locate, enter and set the desired function.

For example, to set the number of times the machine redials a number when the machine is in standby mode with no document loaded, more than 10 keys must be pressed for Redial Tries to appear on the display.

1. Press MENU/EXIT.
2. Press ▼ three times to select Setup.
3. Press ENTER or ► to enter Setup menu.
4. Press ▼ three times to select Dial Options.
5. Press ENTER or ► to enter Dial Options.
6. Press ENTER or ► to enter Redial Tries.

Speed access

If the function is assigned a speed access number, typing this number in at the menu display prompt at level 1 will bring up the setting or registration display in level 4 for direct access.

Note 1: Speed access numbers are only assigned to SETUP menu functions (level 4.)

Note 2: Speed access can only be initiated from the level 1.

Note 3: Numbers must be entered in 2-digit form (i.e., 00-99)

Note 4: Speed access numbers are set at the factory and cannot be changed. Some numbers are not available depending on the country in which a machine was purchased and whether or not the machine is equipped with the appropriate option(s).

For example, to set the number of times the machine redials a number when the machine is in standby mode with no document loaded, only 3 keys must be pressed for Redial Tries to appear on the display.

English

1. Press MENU/EXIT.
2. Press “4” and “0” keys.
3. Wait and Redial Tries appears on the display.

The following table lists the speed access numbers and their assigned functions. Please note that some of the functions in this list may not be able to be set by the user. If required, consult your supplier for details.

Code	Function	Code	Function
00	Clock adjustment	01	TSI/CSI
02	TSI/CSI option	03	Sender ID
04	Personal box	05	Memory password
06	Restrict ID	07	ISDN TID
08	ISDN sub No.	10	Auto answer mode
11	Monitor volume	12	Buzzer volume
13	User language	14	Remote diagnosis
15	TX mode default	16	No toner memory receive
17	Memory full save	18	Instant dial
19	Restrict access	20	ECM function
21	Closed network	22	Toner save
23	Sender ID switch	24	1st paper size
25	2nd paper size	26	Power save mode
27	Relay print	28	600 dpi function
29	ISDN dial mode	30	Speech receive
31	Option line type	40	Redial tries
41	Redial interval	42	Auto start
43	Dial tone detect	44	Busy tone detect
45	MF/DP	46	Pulse dial rate
47	Pulse make ratio	48	Pulse dial type
49	MF tone duration	50	PBX line
51	Flash/earth/normal	52	Dial prefix
60	Incoming ring	61	Remote receive
62	T/F timer programme	63	Continuous tone
64	PC/fax switch	65	CNG count
66	Ring response	67	Distinctive ring
70	MCF (single location)	71	MCF (multiple location)
72	Image in MCF	73	Error report (MCF)

Code	Function	Code	Function
80	Auto tray switch	81	Paper size check
82	LAN print time out	83	POP interval
84	Delete POP message	85	GMT time difference
86	Text print	87	Header print
88	Coding mode	89	Ex. fine mode
90	I fax sender ID	91	Domain name
92	MDN	93	Network settings

Note 1: Speed access number 26 Power Save Mode is not displayed when network interface card is installed.

Note 2: Speed access number 27 Relay Print only applies to OKIFAX 5950.

Note 3: The above list contains numbers that are only displayed when an option is mounted.

G3 Dual Line Option

02 TSC/CSI Option

31 Option Line Type

G4 Option

07 ISDN TID

08 ISDN Sub. No

28 600dpi Function

29 ISDN Dial Mode

2'ND Tray Option

25 2'ND Paper Size

8MB Memory Option

28 600 dpi function

LAN Option

80 Auto Tray Switch

81 Paper Size Check

82 LAN Print Timeout

83 POP Interval

84 Delete POP Message

85 GMT Time Difference

86 Text Print

87 Header Print

88 Coding Mode

89 Ex. Fine Mode

90 I Fax Sender ID

 
 
 
 
 
91 Domain Name

92 MDN

93 Network Settings



English



Chapter 3 - Installation

Getting started

To install your new fax machine, please thoroughly read and follow the instructions provided in this chapter. There are a number of initial settings that should be made before your fax machine can operate properly. Please complete these steps before using the machine.

If you have purchased an option package with the machine, please refer to the documentation received with that option as well as to the appendices in this user's guide.

Where to install machine

- Place the machine in a dust-free location out of the path of direct sunlight.
- Allow sufficient space on each side of the machine to ensure adequate ventilation.
- Make sure that both power and telephone outlets are nearby and easily accessible.
- Choose a location where relative humidity remains between 20 to 80% and temperature between 10 to 32°C (50 to 90°F).

Unpacking

Before beginning to set up the machine, confirm that all of the items listed below were included in the fax carton. Remove the contents and place the items on a sturdy, clean surface.

- Fax unit
- Toner cartridge
- Image drum unit (inside fax unit)
- AC power cable
- Telephone line cable
- Document stacker

English


- This user's guide

Please refer to the illustration in Chapter 1 for component identification.
If there is any item missing, immediately contact your supplier.


Setup

Inserting toner cartridge

1. Using both hands, carefully lift up on the document tray until it reaches a semi-upright position. (The top half of the fax unit moves upward and back on hinges to expose the copy stacker.)

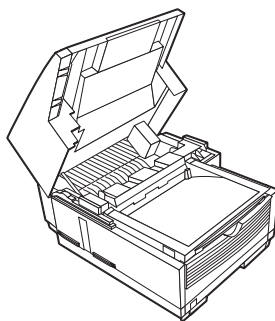

2. To open the image drum/toner cartridge compartment, firmly press on the release buttons on both sides of the copy stacker, releasing the compartment latch. Open the compartment by lifting up on the copy stacker section.

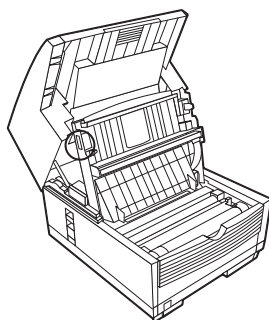


Caution:

Never expose the image drum unit for more than 5 minutes. Never expose the image drum unit to direct sunlight. Always hold the image drum unit by the ends. Never touch the surface of the green drum in the image drum unit.

English

3. Only touching the image drum unit at the ends, carefully lift it out of the compartment. Set the unit on a clean, dry surface out of direct sunlight.

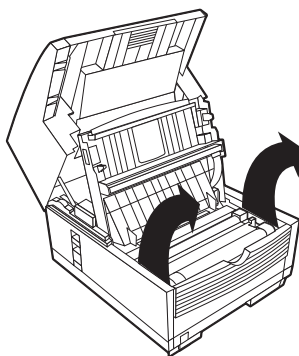


4. Remove the protective sheet from the image drum unit, and the packing material from the toner well.
5. Place the image drum unit back into the machine. Press down firmly on the locations marked "PUSH" (immediately above the toner well) until the image drum snaps into place.

Caution:

This machine will only operate using the correct toner cartridges specified for this fax machine. The use of any other toner will result in machine malfunction and display an operation error.

6. Before removing the toner cartridge from its packaging, check to confirm that it is the correct cartridge for the machine. After confirming it is the correct toner cartridge, remove it from the packaging and gently shake it from side to side to evenly distribute the toner powder.

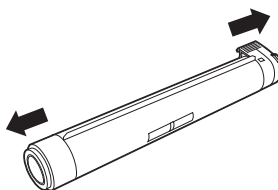


Caution:


Please be certain that the cartridge is not inserted backwards.

English

7. Carefully peel the white plastic seal away from the bottom of the toner cartridge. With the ridged side facing up and grey lever on the right, insert the toner cartridge into the toner well left end first.

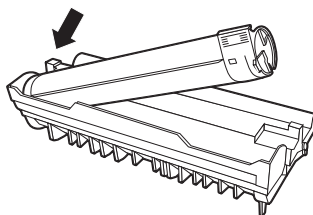


8. With the cartridge in place, push the grey lever forward to secure it and release the toner.

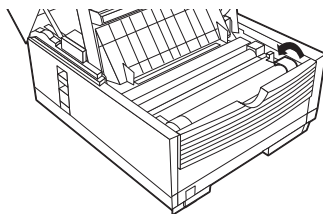


9. Close the compartment latching the cover securely, return the upper section of the machine to operating position, and reattach the document stacker to the rear of the machine.

Attaching document stacker

Attach the document stacker at the document exit on the back of the machine using the latching mechanism provided. Adjust the slide lever to select the angle at which the document stacker is attached.

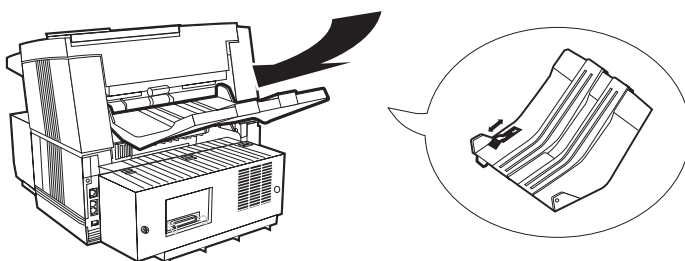**Connecting telephone line**

1. Plug one end of the telephone line cable into the LINE socket (uppermost telephone socket) on the rear of the machine.

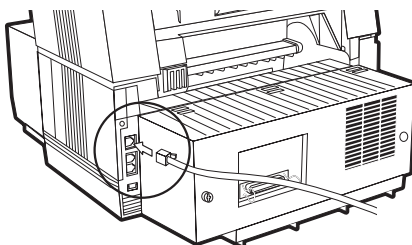


2. Plug the other end of the cable into the wall telephone socket.

Note: Be sure to connect this line before connecting external telephone or optional handset to the machine.

Connecting external telephone/answering machine

1. Plug the telephone cable into the TEL socket (located immediately below the LINE socket) on the rear of the machine. (In certain countries it may be necessary to use a telephone plug adapter).

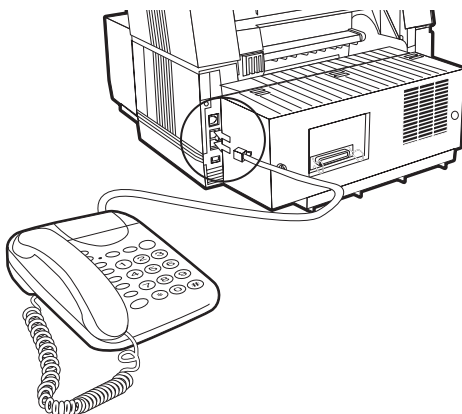

2. Plug the other end of the telephone cable into the socket on the external telephone or answering machine.

Note 1: If connecting both a telephone and answering machine, first connect the answering machine to the fax machine, and then connect the external telephone to the answering machine.


Note 2: The TAD mode must be set in the "ON" position for an answering machine to work with this fax machine. Please refer to "Dialling/Incoming Call Modes" in this chapter.

English

WARNING
BEFORE CONNECTING THE POWER CABLE, PLEASE ENSURE
THAT THE POWER SWITCH IS IN THE OFF POSITION (O IS
DEPRESSED).

Connecting power cable

1. Plug the corresponding end of the power cable into the power inlet on the rear of the machine.

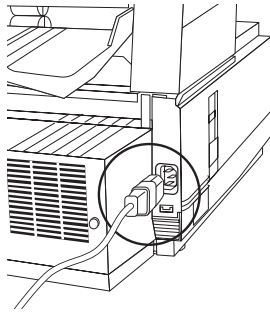

2. Plug the other end of the power cable into an earthed AC power socket.

WARNING
CHECK TO CONFIRM THAT THE VOLTAGE OF THE POWER
OUTLET IS COMPATIBLE WITH THE OPERATING VOLTAGE OF
THE MACHINE. INSUFFICIENT OR EXCESSIVE MAINS VOLTAGE
WILL DAMAGE THE MACHINE AND MAY ALSO BE HAZARDOUS
TO THE MACHINE OPERATOR.

3. Turn the power switch to the ON position (I depressed). After the warm-up cycle, the time and current answering mode will be shown on the display. The machine is now in standby mode.

Loading paper


The standard paper tray can hold up to 250 sheets of standard-weight (75g/m² – 20lb) paper. For best results, use paper specifically made for laser printers or photocopiers. The machine is set for universal adjustment, allowing the use of A4, letter or legal sized paper. The machine automatically reduces the vertical length of received page images to fit on the paper installed.

English

Note 1: Reduction down to 75% of the size of the original; e.g., if the paper tray is loaded with A4 or letter-sized paper, a document sent on legal paper will be reduced to fit on the paper loaded in the machine.

Note 2: Factory setting is for A4 paper. If another paper size will be used, change the 1'ST PAPER SIZE setting of the user functions to match the appropriate paper size.

1. Remove the paper tray from the machine.
2. Adjust the paper guides to the width of the paper to be loaded.

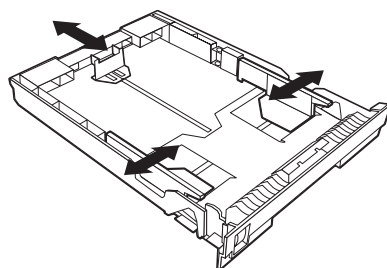

3. Lift up on the paper length adjustment guide and set it to the length of the paper. If using legal paper, extend the paper tray by folding down the rear of the paper tray and move the paper length guide fully to the rear of the paper tray.
4. Load the paper, face down, into the tray (up to 250 sheets).
5. Return the paper tray to its slot, and push it in gently but firmly until it latches in place.


Note: Be sure the paper fits under the tabs at both edges of the tray. Do not fill past the Paper Full marker.

Paper stacker settings


The paper stacker should be set up to match the paper quality used in the fax machine. If the paper stacker is not set correctly or if the paper is not within the specified stacking capacity, the paper may not stack properly or paper jams may occur. (If your paper has curled edges this may restrict the stacking capacity of the machine.)

English

1. **For paper with no curl or downward curling paper:** pull out the sub-tray (1) and fold out the sub-stacker (2).

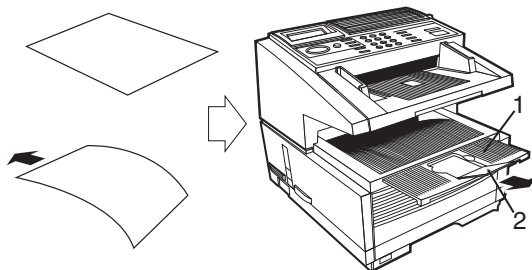

2. **For upward curling paper:** pull out sub-tray (1), fold out sub-stacker (2) and push the sub-tray back in again.

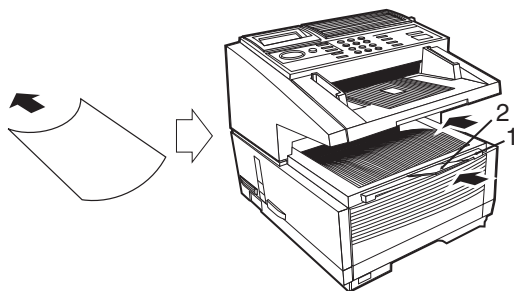

Clock adjustment

To ensure that the correct date and time appear on transmitted and received faxes, and also to enable use of the many time-sensitive features of your fax machine, the system clock needs to be set. This section describes how to set the correct date (mm/dd/yyyy or dd/mm/yyyy format set by product region) and time (00:00-23:59). Speed access No. 00.

1. Press MENU/EXIT to enter the system menu.
2. Enter the speed access number (00). The time and date prompt will be displayed.
3. Enter the current date (xx/xx/xxxx) and time (hh:mm) using numeric keys (0-9), then press ENTER.
4. Press MENU/EXIT to return to standby mode.

Note: *Entering of invalid data (for example, the wrong date format was used) will render the ENTER key ineffective.*

Fax ID

The machine will use the information input under this function to identify itself during communications. In most countries the programming of this information into the machine before use is a legal requirement. In certain countries this information must be set by the installation engineer and is not user adjustable. In such cases the adjustments described here may not appear in the standard menu.

TSI/CSI: The telephone number assigned to this machine. It will be printed on the top of faxes sent and appear on the displays and reports of other fax machines communicated with. A TSI/CSI can be up to 20 characters long. Speed access No. 01.

TSI/CSI Option: This registers the telephone number for the second line and is disabled when this G3 option is not installed. The same limitations as TSI/CSI apply. Speed access No. 02.

Sender ID: A descriptive title (usually the machine location or name of company or office). This information will be printed at the top of every fax sent. Up to 32 characters can be entered; the first 16 characters of the Sender ID are also assigned as Personal ID, which may appear on the displays or reports of other fax machines communicated with. Speed access No. 03.

1. Press MENU/EXIT to enter the menu.
2. Enter the speed access number 01 (TSI/CSI) and wait for the TSI/CSI prompt message to appear.
3. Enter up to 20 numbers and characters (0-9/Hyphen/Space/+), press ENTER.
4. Press ▼ to select Sender ID and then press ENTER or ►.

Note 1: *Sender ID can also be accessed from the main menu by entering its speed access code 03.)*

Note 2: *TSI/CSI Option is displayed when the G3 option board is installed.*

5. Enter up to 32 numbers and characters (0-9/*/#/a-z/A-Z/Pause/Hyphen/Space/+), press ENTER.
6. Press MENU/EXIT to return to standby mode.

English

Machine settings

Answering modes

The machine has a number of answering modes which determine how incoming calls (both fax and voice) are handled. The current answering mode is shown on the display when the machine is in standby mode. The most appropriate mode varies depending on how the machine is used and the external telephone devices connected to it. Review the answering modes listed below and then program the machine to the mode which best meets your requirements. Speed access No. 10.

Note: Only FAX, MEM and FWD answering modes operate when the G3 option board is installed. When the fax machine is set to another mode, it will operate as FAX.

Auto Receive Mode (FAX): This is the best mode if the machine is connected to a telephone line dedicated to fax communications. The machine will assume that all incoming calls are faxes and automatically process them as such.

Manual Receive Mode (TEL): This is the best mode if the same telephone line is used for voice and fax communications and the majority of incoming calls are voice oriented. Each time someone calls, the machine will emit a ring like a telephone (ring disabled if ISDN board is installed). The calls can be taken using an external telephone (or the optional telephone handset) connected to the machine. If a fax tone is heard when the receiver is picked up, simply press the START key and then hang up the telephone to receive the fax. In this mode no incoming calls will be answered automatically.

Telephone/Fax Automatic Switch Mode (T/F): The best mode if incoming calls are a mixture of fax and voice communications. In this mode, the fax detects whether or not the incoming call is fax or voice oriented. If the call is from another fax machine, the machine switches to FAX and receives the message. If the call is voice oriented, the machine will emit a ring like a telephone, and if the call is not answered it will switch to the FAX to allow the calling party to send a fax manually. *This mode is not available if the optional ISDN G4 board is installed.*

Telephone Answering Device/Fax Automatic Switch Mode (TAD): This mode should be used if an answering machine is connected to the fax machine. Like T/F, TAD detects whether or not the incoming call is fax or voice oriented. If it is a fax, the machine will receive the message

English

without activating the answering machine. If the incoming call is a voice communication, the machine will ring as it does when in TEL. If the call goes unanswered, the machine transfers the call to the answering machine, allowing the calling party to leave a message. If the caller decides to send a fax, the machine automatically switches modes to receive the fax. *Note that this receive mode is not available if the optional ISDN G4 board is installed.*

Note: TAD is normally not activated. To have it activated, please contact your supplier.

Memory Reception Mode (MEM): Data from incoming fax communications is stored in memory even if there is paper loaded in the machine. The PRINT OPERATION function is used to print out the data stored in memory when the machine is in MEM.

Note: If a memory password has been set (see Memory Password in Chapter 6), this mode cannot be changed to another mode without first entering the password. After entering the password and switching between modes, there is no need to enter the password again when printing data from memory without returning to the standby mode. However, faxes received and marked for confidential or polling will be stored in memory and not forwarded.

Forwarding Mode (FWD): When set to this mode the machine will receive all fax communications into memory, and then automatically send the messages to the telephone number programmed into the Call Forwarding function (see Call Forwarding in Chapter 5).

PC Mode (PC, optional): This mode is only available when the machine is connected to a personal computer via the optional multifunction peripheral (MFP) software. When activated, the machine does not respond to the signal, but forwards it directly to the computer. Fax reception by the computer is enabled upon receiving the call signal.

Note: The optional MFP driver must be installed in the computer to use this function.

Setting answering mode

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 10 (Auto Answer) and wait for the Auto Answer prompt in the display.
3. Press ▼ or ▲ to select the desired mode, press ENTER.

English

4. Press MENU/EXIT to return to standby mode.

Dial/incoming call parameter settings

Your fax machine offers a multitude of functions which reduce the time required for manual operation and make fax communications more efficient. Setting the following options before beginning use of the machine will ensure that it performs according to expectations during actual operation.

Note: *User adjustment of some of these functions is not permitted in some countries. In such cases those functions will not be available for setting.*

Dial parameters

Redialling Tries: If the machine dials a number but fails to obtain a response it can automatically redial several times. Redialling tries are set in one-try steps, the number of which is adjusted to meet the regulations of the country where the machine is installed (France, 1-5 tries; other countries, 0-10 tries). Speed access No. 40.

Redial Interval: This is the time that the machine waits between successive redial tries. The time interval (in 1 minute units) before redialling is set to meet the regulations of the country where the machine is installed (France, 1-12 min; other countries, 1-6 min). Speed access No. 41.

Auto Start: With this function set to ON, the machine will automatically begin dialling as soon as a location is selected by pressing a One-Touch key or entering another Speed Dial number. There is no need to press the START key. Available settings are ON and OFF. Speed access No. 42.

Dial Tone Detect*: This function allows the machine to wait for and detect a dial tone before dialling. A dial tone must be detected if set to ON, and need not be detected if set to OFF. Speed access No. 43.

Busy Tone Detect*: This function allows the machine to detect a busy tone when sending a fax. The available settings are ON and OFF. Speed access No. 44.

Tone/Pulse (MF/DP)*: This function controls the dialling method of the machine. There are two common dialling methods; dialling with mono-tone pulses (pulse dialling DP) and dialling with different tones (tone or multiple frequency (MF) dialling). Available settings are MF and DP. Speed access No. 45

English

MF (Tone) Duration*: If the machine is set to MF, this function controls the duration of the tones used for dialling (tone duration varies by country). Available settings are 75, 85 and 100ms. Speed access No. 49.

PBX Line*: This function must be turned on if the machine is connected to a PBX. When the function is activated and the access digit function programmed, the machine will recognise the access digit in the PBX to obtain an outside line. After dialling the access digit, the machine will pause to wait for an outside line before dialling the remainder of the telephone number. Available settings are ON and OFF. Speed access No. 50.

Flash/Earth/Normal*: If the machine is connected to a PBX, this function sets the method of switching between the flash and earth modes for PBX lines. Available settings are Normal, Flash and Earth. Speed access No. 51.

Dial Prefix*: If the machine is connected to a PBX, this function is used to inform the machine the access number to use for obtaining an outside line from the PBX. Up to four digits can be input for the prefix number. Speed access No. 52.

Note: Settings marked with * cannot be selected when ISDN G4 board is installed.

Incoming call parameters

Incoming Ring: This function offers a soft ringing sound through the machine's built-in speaker when a call is received. If the function is set to OFF, the machine will not emit a ringing sound to announce incoming calls. If the function is set to ON, the machine will only emit a ringing sound when the machine is set to TEL (manual receive mode) or Ring Response is set to 5-20sec (except 1 ring). When set to DRC (Distinctive Ring feature), the machine will emit a ringing sound for each incoming call with the same tone even if the Distinctive Ring parameter is set to ON. Available settings are ON, OFF and DRC. Speed access No. 60.

Remote Receive: This function allows remote switching from telephone to fax mode to receive an incoming fax. If you answer an incoming call on a connected external telephone and hear a remote fax machine, you can switch your fax machine into fax receive mode without having to press the START key. Use the keypad of the optional handset or external telephone to enter the remote receive number programmed into the machine. Available settings are: OFF, 00, 11, 22, 33, 44, 55, 66, 77, 88, 99, ** or ##. Speed access No. 61.

English

Continuous Tone: When this function is set to ON, it is possible to choose for a continuous tone at the end of receiving a fax. Pressing the STOP key turns off the tone. Speed access No. 63.

PC/FAX Switch: This function determines whether or not the machine will automatically switch to FAX when fax reception by a connected personal computer is not possible (for example, if the PC is turned off or your fax application is not running). When set to ON, the machine will automatically switch to FAX. Fax reception is disabled when set to OFF. Available settings are ON and OFF. Speed access No. 64.

Other basic parameters

Monitor Volume: The machine is equipped with a speaker for monitoring operations. This function provides a 5-level audio adjustment of the speaker (OFF, Low, Mid, High-Mid, High). Speed access No. 11.

Buzzer Volume: The machine is equipped with a buzzer that sounds when a fax communication ends or, if an external telephone is connected, when the receiver is not properly returned to its cradle after use. The settings are Low, Middle and High. Speed access No. 12.

User Language: Two language variations were installed in the machine at the factory. The language programmed will be used for showing captions on the display and for printing reports. Speed access No. 13.

Note: *Your supplier may be able to provide additional languages for installation.*

Paper size setting

The machine is capable of supporting two different paper settings (when the 2nd-Tray option is installed).

1ST Paper Size: Use this function to set the size of the paper primarily used in the machine. Speed access No. 24.

2ND Paper Size: Use this function to set a secondary paper size. Setting cannot be made unless 2nd-Tray option is installed. Speed access No. 25.

Message confirmation report options

The Message Confirmation Report (MCF) is a very convenient feature often used on a daily basis to ensure that faxes were sent or arrived at the proper destinations. The following functions are for setting MCF parameters.

English

MCF. (Single-Loc): Set in the ON state, a MCF will be printed out automatically for single location transmissions. When set to OFF, no report will be printed out. Speed access No. 70.

MCF. (Multi-Loc): Set in the ON state, multiple location transmission MCF's will be printed automatically. When set to OFF, no report will be printed out. Speed access No. 71.

Image in MCF. : Set in the ON state, a portion of the first page of the fax transmitted will be printed in the MCF. When set to OFF, no image will be printed in the report. Speed access No. 72.

Err. Report (MCF.): Set in the ON state, an error report is automatically printed if a fax communication does not end with the service code 0000 (indicates a successful transaction). When set to OFF, the report is not printed out automatically. Speed access No. 73.

ISDN G4 option

If the machine comes installed with an ISDN G4 board, the following parameters must be set prior to beginning fax operations. Additionally, the incorporation of the ISDN board also disables a number of the parameters set for analogue operations (see comments with those parameters listed).

ISDN Dial Mode: This mode is for setting the overall communication parameters of the machine when in ISDN mode. Set to G3 mode, the call originates in G3 mode when dialled from the numeric keypad. When set to G4 mode, the call originates in G4 mode when dialled from the numeric keypad. Speed access No. 29.

Speech Receive: Set to ON, this parameter enables the reception of analogue communications from the network. When set to OFF, allows limited reception of analogue communications. The limitations when set to OFF depend on the ISDN network that the fax machine is connected to. Speed access No. 30.

Note: For analogue transmission capabilities, please contact your authorised supplier.

ISDN Terminal ID (TID): ISDN TID requires the input of up to 3 numeric digits for the country code, 20 numeric digits for the ISDN subscriber number, and 10 alphabetic characters for the ISDN ID (subscriber code). Speed access No. 07.

Note: At least one of these three items must be input for this parameter.

English

ISDN Sub No. (optional): The ISDN Sub No. requires the input of 19 numeric digits for the sub address of the machine when in ISDN mode. Speed access No. 08

Setting ISDN parameters

To set dial, incoming call and other basic parameters, as well as MCF and ISDN G4 Options:

1. Press MENU/EXIT to enter the menu.
2. Enter the speed access number of the parameter to be changed and wait for the appropriate display prompt.
3. When the display for the desired parameter is shown, press ▲ or ▼ to select the setting (or input data where required), press ENTER.
4. Press MENU/EXIT to return to standby mode.
5. Repeat the above steps until finished setting parameters.

Connecting to a PBX

Private Branch Exchanges (PBXs) are private telephone systems used to route calls internally, for example, in a company. When dialling a telephone number, if a prefix (access) number is required to open an outside line, the line is connected to a PBX. If this machine is going to be connected to a PBX, please make the following changes to enable the machine to recognise the prefix digits in the telephone numbers used to obtain access to the outside line. After dialling the prefix digits, the machine will wait until the outside line is available (secondary dial tone detected) before dialling the rest of the number.

Note: *Service assistance may be required to make changes in some countries. Also, some PBX systems may require additional adjustments to the machine. If there is any problem with fax communications after changing parameters, please contact your authorised dealer for assistance.*

Setting PBX parameters

1. Press MENU/EXIT to enter the menu.
2. Enter the speed access number 50 (PBX LINE) and wait the display prompt.
3. Press ▲ or ▼ keys to select ON or OFF setting, press ENTER.

4. Press ▼ to select Dial Prefix, press Enter or ►.

Note: *Dial Prefix can also be accessed from the main menu by entering its speed access number 52.*

5. Enter the digit(s) normally dialled to obtain an outside line from the PBX and press ENTER.

6. Press MENU/EXIT to return to standby mode.

Note 1: *Keep in mind that all of the outside telephone numbers programmed into the machine must begin with the dial prefix of the PBX.*

Note 2: *To cancel these parameters at a later date, follow the above instructions but set the PBX LINE parameter to OFF.*

MFP PC interface kit

If the machine is equipped with a multifunction peripheral (MFP) PC Interface Kit, please see Appendix B for information regarding this function. For more detailed information, refer to the documentation received with the PC interface product.

Network print kit

If the machine is equipped with an Ethernet Adapter, please see Appendix C for information regarding Network Print Service functions and specifications. For more detailed information, refer to the documentation received with the NIC adapter.

Internet fax and network printer/scanner

This optional function enables the transmission and reception of faxes and e-mail through the Internet. This option also allows the fax machine to act as a network printer and scanner. Please refer to Appendix C for information on this feature and its specifications.

Note: *Scanning operations can only be done over a local network with scanning results being sent to e-mail addresses.*



English

ISDN G4 board

 
 
 
 
 
If the machine is equipped with an ISDN G4 board, please see Appendix D for information regarding the features and specifications of the machine after board installation. For more detailed information, refer to the documentation received with the ISDN board.

G3 Dual line

Installation of this option enables two lines to be used concurrently. Please refer to Appendix E for information on this feature and its specifications.

Fax2Net (Internet)

This optional function enables the Fax2Net service. Please refer to Appendix G for information on this feature and its specifications.



Chapter 4 - Directories and Basic Operations

Programming dialling directories

This fax machine is equipped with 40 keys for rapid one-touch dialling (OKIFAX 5950 is equipped with a second hidden panel for an equivalence of 80 keys). Up to two 40-digit numbers can be programmed to each one-touch key, a primary number and an alternative number that is used if the primary number is busy or goes unanswered. It is also possible to enter a 15 alphanumeric location ID (name) for each key. Once programmed, these keys provide unparalleled convenience and savings in time required for daily faxing operations.

Speed dial numbers

This function enables the automatic sending of faxes. The machine is equipped with features which allow the transmission of faxes with the push of a single key (one-touch faxing), 2 and 3-digit ID speed dialling, and speed dialling of groups of telephone numbers.

- **OKIFAX 5750** 140 programmed Speed Dial numbers (1-40 assigned to one-touch keys)
- **OKIFAX 5950** 230 programmed Speed Dial numbers (1-80 assigned to one-touch keys)

The information for programming a Speed Dial number includes a name (NAME), a primary location Number (LOC#), an alternate number (ALT#), communications speed, Echo protection and G3/G4 selection.

Entry	Description	Type of Input
NAME	15 characters (max)	Ten-keypad 0-9/*/#/alphabetic characters (uppercase, lowercase)/special characters/ Pause/Hyphen/Space/+
LOC#/ALT#	40 characters each (max)	Ten-keypad 0-9/*/#/ Pause /Hyphen/Space/+ for FAX
	64 characters each	Ten-keypad 0-9/*/#/Pause/Hyphen/Space/+ alphabetic characters/unique keys for e-mail and web addresses (see Note 1 below).

English

Entry	Description	Type of Input
Comm. Speed	Parameter selection	33.6K / 28.8K / 14.4K / 9.6K / 4.8K
Echo Protection	Parameter selection	ON / OFF
G3/G4 Selection	Parameter selection	G3 mode / G4 mode (see Note 2 below)

Note 1: This applies when the Fax2Net service or NIC Card is mounted.

Note 2: This step required only if ISDN G4 board is installed. However, this setting is specific to each Speed Dial number and is not affected by the overall machine ISDN setting (Speed access no. 29).

Other keys used in the programming process include MENU/EXIT, SHIFT (▲▼◀▶) keys, ENTER, Capital (CAPS), CLEAR, and Delete (DEL).

Programming speed dial numbers

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select LOCATION PROGRAM, press ENTER or ▶.
3. Press ENTER to select SPEED DIAL.
4. Enter speed dial number to be programmed (one-touch, 2-digit, 3-digit), press ENTER.
5. Enter LOC # (telephone number), press ENTER.
6. Enter Name, press ENTER.
7. Input ALT# (telephone number), press ENTER.
8. Press ▲ or ▼ to select Communication Speed, press ENTER.
9. Press ▲ or ▼ to select Echo Protection, press ENTER.
10. Press ▲ or ▼ keys to select mode (G4 or G3), press ENTER.

Note: This step required only if ISDN G4 board is installed. However, this setting is specific to each Speed Dial number and is not affected by the overall machine ISDN setting (speed access no. 29).

11. Repeat the above process from Step 3 until finished programming. When finished, press MENU/EXIT to return the machine to standby mode.

English

12. When finished with the programming of one-touch keys, lift the plastic cover protecting the one-touch labels and (using a pencil) write the names corresponding to the newly programmed keys on their respective labels. Then replace the cover.

Note 1: When entering a new telephone number using the numeric keypad, it is possible to register it to a Speed Dial number. After entering the telephone number, press the SEARCH key. The location of unregistered Speed Dial numbers will be displayed.

Note 2: Switch the Echo Protection setting to OFF when changing the location of a one-touch key.

Chain dialling

Even though the telephone number for each one-touch key can be up to 40 digits long, there may be a need to dial numbers with more digits. This function is provided for that purpose. To create a chain dial number, program the first 39 digits into a Speed Dial number, press the Plus (+) key (one-touch key #39) as the 40th character and then program the rest of the number into another Speed Dial entry.

1. Select the first Speed Dial number programmed.
2. When prompted by the display, enter the second Speed Dial number.
3. Press the START key to begin faxing.

Note: The remaining part of the number not programmed in the first Speed Dial number can also be input manually using the numeric keypad when prompted by the display (step 2).

Group dialling

This function enables the faxing of documents to multiple locations. Once Speed Dial numbers have been programmed into the machine, this function can be used to group numbers together for simultaneous faxing of a document. As many as 20 different groups of telephone numbers can be stored in memory, each group having a maximum limit of 140 locations (OKIFAX 5750) or 230 locations (OKIFAX 5950). Each group is registered by a group dial number, and can also be assigned a name for alphabetic search.

Note: The same listing of characters as that for naming Speed Dial numbers applies.

*English***Programming groups**

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select LOCATION PROGRAM, press ENTER or ►.
3. Press ▼ to select GROUP, press ENTER or ►.
4. Enter group dial number and press ENTER.
5. At "SELECT LOCATION(S)," press SPEED DIAL.
6. Enter the Speed Dial number of the telephone number you want to add to the group. Wait. The information for the telephone number to be added will appear.
7. If the information is correct, press ENTER. (Location is now registered in that group.)
8. Repeat steps 5 to 7 until all telephone numbers for the group have been registered.
9. Enter name and press ENTER.
10. Press MENU/EXIT to return to standby mode.

Deleting entries

1. Follow the above directions, but at "SELECT LOCATION(S)," press ENTER.
2. Press ▲ or ▼ to select entry to be deleted, press CLEAR or ENTER. Information for entry will be shown.
3. Press CLEAR. Entry is now deleted from group.
4. When finished, press MENU/EXIT to return to standby mode.

Dialling groups

1. Load the document(s).
2. Press SPEED DIAL.
3. Press the # key on the numeric keypad.
4. Enter group number using the numeric keypad and press ENTER.
5. Press ENTER again to confirm.
6. Press START to begin scanning and dialling.



Basic operations

Preparing documents

- Try to use good quality documents for transmissions. Documents that are typed or written in dark felt-tip ink on white (or light-coloured) paper work best.
- Do not send documents that are not rectangular in shape.
- Never try to send or copy documents that have wet or sticky surfaces, wrinkles, staples or paper clips.
- If uncertain of how well a document will fax, first try making a copy of it.
- If a document is in extremely poor condition (creasing, torn, etc.), first make a copy using a photocopying machine and then send the copy.

Document size

For the machine to operate properly, all documents must be at least 148 mm (5.8") in width and 128 mm (5.6") in length. Maximum width and length are 216 mm (8.5") and 356 mm (14"), respectively. If a document smaller than the width of the Contact Image Sensor (216 mm, 8.5") is received and its colour is too white, the perimeter of the output reproduced by the facsimile will be shaded grey.

Multiple page documents

Your machine can scan paper with a base weight of 60 to 105 g/m² (16 to 28 lb). It can hold up to 50 sheets of standard 75 g/m² (20 lb) paper (e.g., photocopier paper) in the document tray. If documents are printed on heavier or lighter paper, up to 15 sheets can be loaded. For extremely heavy paper, load and send one page at a time.

When loading multiple-page documents, do not fax documents printed on paper that is thinner than 0.08 mm (0.003") or thicker than 0.13 mm (0.005"). For single-page documents, do not load paper thinner than 0.06 mm (0.002") or thicker than 0.15 mm (0.006").

English

Loading documents

In order to prevent paper jams and problems during scanning, neatly stack and align the edges of documents before loading them into the document tray. Do not load documents of different sizes at the same time.

Note: *A document can be loaded and prepared for transmission while the machine is sending or receiving another message (as long as the document tray is empty). To do this, load the document, select the location and press the START key. The document will be sent after completion of the current operation.*

1. Adjust the document guides to the width of the documents being sent.
2. Neatly stack the documents and then insert them face down into the document tray. Readjust the document guides.
3. The machine will grip the documents and pull them in for transmission, beginning with the bottom page first.
4. If necessary, adjust the resolution and contrast to provide the best possible quality referring to the tables below.
5. Document is ready for faxing or copying

Original Document	Set RESOLUTION to
Normal	Standard (STD)
Small type/fine details	Fine/Ex. Fine
Photos or many shades of grey	Photo

Original Document	Set TYPE OF ORIGINAL to
Normal contrast	Normal
Contrast is too light	Light
Contrast is too dark	Dark

Faxing to a single location

1. Load the document(s).
2. Select a location as follows:.

To Dial Using	Do This
One-touch key	Press the one-touch key

To Dial Using	Do This
2 or 3-digit dial	Press SPEED DIAL key, then enter Speed Dial number using the numeric keypad.
Search	Press the SPEED DIAL key, then enter the first character using a one-touch key.
Numeric keypad	Dial as if using a telephone. If a mistake is made, press the DEL button to move the cursor back and re-enter the correct number. Press the START key when finished. If the ISDN G4 board is installed, you will be prompted to select either G3 or G4 transmission. Use the ▲ and ▼ keys to make your selection and press ENTER. Then press START to begin.
External telephone	Pick up the receiver from its cradle and dial the number. If the receiving machine is in automatic reception mode, a high-pitched tone will be heard. If someone answers, request that they press the START key on their machine.

3. If necessary, press the START key to begin transmission.
4. The following messages may be shown on the display during a typical fax transmission.

Message	Explanation
(location):	Identity of the remote location such Personal ID, TSI/CSI, Location ID or telephone number programmed into the machine.
Calling:	The machine is dialling or calling.
Sending:	Machine is transmitting a fax.
Result - OK:	Fax was transmitted successfully.
Commun. Error:	If this or another error message appears, a problem occurred during the communication. Try re-sending the fax. Refer to "Troubleshooting" for assistance.

Search key dialling

If you are not sure which Speed Dial key is programmed with a certain location, use the SEARCH key to look through the alphabetical telephone directory of location IDs. After loading the document(s):

1. Press the SEARCH key, the display will show "ENTER 1ST CHAR."
2. Enter the first letter of the name of the desired location from the one-touch keypad. (If the first character of the desired location is a unique character, use one-touch key 20 to search for the character.)

English

3. Repeatedly press the letter key to scroll through the list of location IDs beginning with that letter.
4. When the correct location is found, press the START key to begin faxing.

Real-time dialling

The machine normally dials the entire telephone number of a location at one time. However, telephone numbers can also be dialled in real time (one digit at a time). To dial from the machine itself, press the HOOK key, and dial using the numeric keypad on the machine's control panel. Another way to dial in real time is when an external telephone is connected. Pick up the handset and dial using the keypad on the telephone.

Redialling

If a line is busy or there is no answer, the machine will wait and then automatically redial the number. Additionally, if the machine is transmitting from memory and a communication error occurs, it will automatically redial the number and send the fax again. Manual redialling of the last telephone number called is also possible at any time by pressing the REDIAL key on the control panel.

Faxing to multiple locations

1. Load the document(s).
2. Select a location as follows:

To Dial Using	Do This
One-touch key	Press the one-touch key
2 or 3-digit dial	Press SPEED DIAL key, then enter Speed Dial number using the numeric keypad.
Search	Press the SPEED DIAL key, then enter the first character using a one-touch key.
Numeric keypad	Dial as if using a telephone. If a mistake is made, press the ◀ key to move the cursor back and re-enter the correct number (the DEL key deletes the character at the current cursor position, or the CLEAR key deletes all characters from the current cursor position to the end). Up to 10 locations can be entered in this way. If the ISDN G4 board is installed, you will be prompted to select either G3 or G4 transmission. Use the ▲ and ▼ keys to make your selection and press ENTER.

To Dial Using	Do This
Group dialling	Press the SPEED DIAL key, then press the # key and enter the group number using the numeric keypad. Press ENTER to confirm the displayed group.

3. Press the ENTER key.
4. Repeat steps 2 and 3 above until all groups and/or individual locations for the broadcast have been entered.
5. Press the START key to begin scanning. Transmission will commence after scanning is completed.

Note: If confirming locations, two options are available: by report printing or by display. To return to scan/confirm mode, press STOP key twice.

Message confirmation report (MCF)

The machine can be set to print out a MCF automatically after single and/or multiple-location transmissions. If not set in the automatic mode, MCFs can still be printed at a later time. Please refer to Reports in Chapter 7 for more detailed information.

Cancelling transmission

If there is a need to stop a transmission while still in progress, do the following:

1. Press the STOP key twice in succession.
2. The display will show "STOPPED".
3. If a document is stuck partly in the feeder entrance or elsewhere in the machine, a "RELOAD DOCUMENT" message may be displayed. If so, press the STOP key one more time. The machine will feed the document through the process to the document stacker.

Manual receive mode

Do the following to receive faxes when the machine is set to TEL:

1. When the machine rings announcing a telephone call, pick up the handset of the external telephone. (If a person is on the line, normal voice communication is possible.)

English

2. If a signal from a remote facsimile machine is heard or the party wishes to send a fax after finishing a conversation, press the START key.
3. When the message "Receiving" appears on the display, hang up the handset.
4. The machine will emit a tone following line disconnection, informing the transmission status (i.e., successful or unsuccessful tones).

Receiving to memory

Memory Reception Mode (MEM): When set to MEM, the machine will automatically receive messages into memory and store them there even when there is paper loaded for printing. Data stored in memory can be printed out using the PRINT FROM MEMORY function.

Printing from memory

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select PRINT FROM MEMORY, press ENTER or ►.
3. Press ▼ to select PRINT MEMORY MSG., press ENTER or ►.
4. If a password is not required, data in memory will be printed out. If a password is required, enter 4-digit password, press ENTER.

Note: *Password is only required when previously programmed and machine answering mode is set to MEM (see Memory Password).*

5. Data in memory will be printed out.

No paper reception

If the machine runs out of paper when receiving a fax, a message will be displayed and the data not yet printed stored in memory automatically for printing out later. The machine will print the data stored in memory automatically after paper is added to the paper tray.

No toner reception

If the machine is running low on toner and NO TONER MEMORY RECEIVE is set to ON, incoming faxes are stored in memory automatically for printing later (rather than risk printing illegible faxes). If the

English

machine receives a fax into memory because the toner level is low, "MESSAGE IN MEMORY" will be displayed.

When NO TONER MEMORY RECEIVE is set to OFF, a warning message "TONER LOW, REPLACE TONER CART." will be displayed.

Note: When the "TONER LOW, REPLACE TONER CART." message is shown, it is possible to use the print from memory function to print the faxes stored in memory, but the quality of the print cannot be guaranteed. Replace the toner cartridge as soon as possible.

Cancelling messages stored in memory

It is possible to erase messages stored in memory without printing them.

1. Follow the same instructions as for Print from Memory.
2. When prompted to print the message, press the STOP key and "PRINT MEMORY MSG. MEMORY CANCEL?" will be displayed.
3. To erase or cancel the message without printing it, press the ENTER key.

Unsolicited fax rejection

The machine provides a closed network option that allows the refusal of unsolicited faxes. If activated, when there is an incoming call the machine will compare the TSI (CIG) with the last four digits of the programmed Speed Dial numbers. If there is no match, the incoming call will be refused automatically, thus eliminating unsolicited faxes such as advertising. The machine can also be set to neither send nor receive faxes from locations whose telephone numbers are not programmed into the Speed Dial memory. The available settings are limited reception (RX), limited transmission and reception (TX/RX), and no limitations (OFF). Speed access No. 21.

1. Press MENU/EXIT to enter the menu.
2. Enter speed access number 21 (Closed Network) and wait.
3. When CLOSED NETWORK display appears, press ▼ or ▲ to select setting, press ENTER.
4. Press MENU/EXIT to return to standby mode.

English

Power failures and memory


Your machine is equipped with a battery to prevent the loss of data stored in memory at the time of a power outage. The typical memory-backup time with a fully charged battery is 72 hours. If data is still held in memory at the time of power restoration, the machine will continue operations from the point when power was lost (e.g., delayed transmission, redial waiting conditions, etc. resume from point of power failure). If the data in memory has been lost at the time of power restoration, the machine will print out a Power Outage Report. Please refer to the chapter Reports for more information.

Making copies

The machine is capable of making up to 99 copies at one time. When loaded with the recommended paper, the copy stacker capacity is 250 face down or 10 sheets face up using recommended paper. Documents fed through the automatic document feeder (ADF) will be printed at the resolution set by the operator using the RESOLUTION button, i.e. standard 200 x 100 dpi; fine 300 x 300 dpi; ex. fine 600 x 400 dpi; ex-fine (option) 600 x 600 dpi.

Copying using ADF

1. Load the document(s) in the document tray.

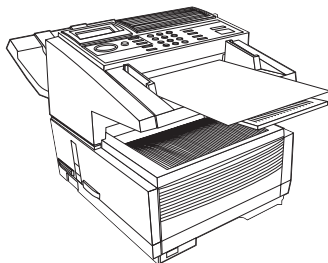


2. Press COPY. The display will show "NUMBER OF COPIES []".
3. If only one copy is required, wait and the machine will begin copying momentarily.
4. If multiple copies are required:
 - (a) Enter the number of copies required using the numeric keypad.
 - (b) Press COPY key again, the machine will begin making multiple copies.

Manual paper feeder

There is manual paper feeder tray built-in immediately above the paper tray. To make a copy on paper different than that loaded in the paper tray, fold down the manual paper feeder tray and manually insert the paper.

1. Load the document(s) in the document tray.
2. Fold down the manual paper feeder tray.

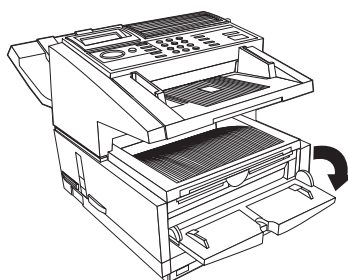

3. Insert a sheet of paper (face up) into the tray and push into the slot until the machine takes hold of the paper.
4. Press COPY (see instructions above).

Note: *If making more than one copy, paper must be continually fed one sheet at a time.*

Face up and face down stacking

The machine can stack copies with the printed side face up or face down. The position of the copy output lever (see Chapter 1) on the left side of the machine, above the power switch, determines how copies are stacked. In the upper position copies will exit face down. In the lower position copies will exit face up. However, the face up position may only be used when copying or printing from a PC or via a network using the manual paper feeder.

Note: *Ensure that the copy output lever is correctly located in one of its two positions. A half-way setting will cause a paper jam. Also, do not move the lever during print operation.*

Counters

A number of different counters are provided for keeping track of machine operations and maintenance needs. Counters available for user viewing include the Print counter, for tracking how many times recording paper

English

has been printed, and the Scan counter, for tracking how many times a document has been passed through the ADF (Scan).

Accessing print/scan counters

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select Counter, press ENTER or ►.
3. Press ▲ or ▼ keys to select counter, press Enter or ►.
4. Press ENTER to return to menu level 3.
5. Press MENU/EXIT to return to standby mode.

Resetting image drum counter

There is also an image drum counter which you can reset after changing the image drum. A message will be displayed when the service life of the drum has expired. Reset the drum counter only after replacing the image drum.

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select COUNTER, press ENTER or ►.
3. Press ENTER or ► to enter DRUM COUNT.
4. The display will show "PRESS CLEAR TO DELETE". Press CLEAR to clear (reset) the counter.
5. Press MENU/EXIT to return to standby mode.

Printer cleaning

A printer cleaning function has been incorporated to clean the residual toner off of the charge rollers. Perform printer cleaning periodically to prevent the accumulation of toner on the charge rolls. Build up may cause unwanted marks and blurring in printed faxes or copies.

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select PRINTER CLEANING, press ENTER or ►.
3. The display will indicate that cleaning is in progress.
4. The machine will return automatically to standby when cleaning is complete.

Chapter 5 - Advanced Operations

Delayed transmission

The delayed transmission feature enables the automatic transmission of faxes at a specified time and date. By scanning the document and storing the data in memory, your facsimile machine can send documents at up to 20 (OKIFAX 5750) or 30 (OKIFAX 5950) different specified times until 11:59pm three days later.

Sending delayed faxes

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Press ENTER or ► to enter Delayed TX.
4. Press ▲ or ▼ to move between date and time settings and ◀ or ▶ to move between columns.
5. Enter the desired date and time, press ENTER key.
6. The display will prompt you for the location(s).
7. Enter the desired location using either Speed Dial numbers or numeric keypad.
8. Press START key. The machine will scan the document(s) into memory and wait until the time programmed to begin transmission.
9. This process can be repeated up to 20 (OKIFAX 5750) or 30 (OKIFAX 5950) times when memory is available.
10. After all memory is used, one more transmission is possible by setting documents in the document tray and setting the machine as instructed in steps 2 to 7 above.

Note: Dates and times should be entered using numeric keypad (0-9). Times should be entered following the format 0000-2359 (24-hour clock).

English

Delayed batch transmission

This feature enables the delayed transmission of multiple communications scanned into memory at a time programmed into the machine. Locations planned for use with this function must be programmed into Speed Dial numbers 31-40. Before entering the following session(s), you must first access the BATCH TX Time function in the LOCATION PROGRAM menu and set the transmission time against one of the Speed Dial numbers 31-40.

To send a delayed batch fax (one session):

1. Load the document(s).
2. Press MENU/EXIT key to enter the menu.
3. Press ▼ to select Delayed Batch TX, press Enter or ►.
4. Enter the Speed Dial number of desired location (enter number or press the matching one-touch key) and press the ENTER key.
5. Location and transmission time that has been set will be displayed.
6. Press START key. The machine will scan the document(s) into memory and wait until the time programmed to begin transmission.
7. Repeat the above steps to prepare multiple sessions.

Note 1: Only locations programmed into Speed Dial numbers 31-40 are applicable.

Note 2: Time must be entered using the format 0000-2359 (24-hour clock).

Note 3: There is no limit to the number of batch transmission sessions to set using Speed Dial numbers (31-40), however, no more sessions will be accepted once memory is filled.

Cancelling delayed transmissions

Follow the instructions provided below to cancel a delayed transmission before it has been sent.

1. Press STOP.
2. The display will show CANCEL COMMUNICATION.
3. The display shows Location ID or Tel. No. of delayed transmissions currently programmed in the machine.

English

4. Use ▲ or ▼ keys to select transmission to cancel and then press ENTER.
5. The Location ID and Tel. No. of the selected transmission will be displayed. After confirmation, press the CLEAR key.
6. Selected transmission will be cancelled.
7. For a delayed transmission from the document tray, press STOP again to remove the document.
8. Press MENU/EXIT to return to standby mode.

Priority transmission

When there is a need to ensure that a document is transmitted immediately, the document(s) loaded and scanned under this feature hold priority over previously scanned documents or the processing of messages received in dual access or standby modes.

Sending priority transmissions is as follows:

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Use ▼ key to select PRIORITY TX and press ENTER or ►.
4. Enter the desired location using Speed Dial number or numeric keypad.
5. Press START key. The machine will scan the document(s) into memory and assign first priority for transmission.
6. If all memory is used, the display will offer to send the pages scanned so far. To send scanned pages, press ENTER.

Confidential faxes

Fax machines are often located in open areas where passers by can look through the messages received. If a remote machine is compatible with this range of products or is equipped with a sub-address transmission function, this machine can send confidential faxes to it.

English

Sending confidential faxes

When a confidential fax is sent, it is received to a personal mailbox (or sub-address number) that is only accessible using an access number (password) for that mailbox. However, the address of the mailbox to which the fax is to be directed must be known beforehand. (Ask the person who will receive the fax to provide their mailbox address.) This machine can send messages to up to 64 pre-designated mailboxes in remote machines.

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Use ▼ key to select CONFIDENTIAL TX, press ENTER or ►.
4. Enter the address of the confidential mailbox using the numeric keypad, press ENTER.

Note: The address can consist of up to 20 characters (0-9, Space, *, #).
The machine will dial the number and begin the faxing process.

5. Enter desired location using Speed Dial number or numeric keypad.
6. Press START key.

Receiving confidential faxes

As with sending, this machine can receive confidential faxes only from machines compatible with this range of products or machines equipped with a sub-addressing function. Additionally, at least one confidential mailbox must be set up before a confidential transmission can be received. After setting up the mailbox, give the person who is to send the fax the mailbox address. When a message is sent to that address, it will be stored in memory and cannot be printed until the proper password is entered for retrieval.

Personal (confidential) mailboxes

Your fax machine is programmed for the creation and management of 16 personal mailboxes. When set up, each mailbox is opened as a Confidential, Bulletin Polling or Relay Broadcast (OKIFAX 5950 only) mailbox. Once a mailbox for receiving confidential messages has been created, none of the messages sent to it can be printed until the password for that box is correctly entered in the retrieval (printing) sequence. Speed access No. 04.

Creating personal (confidential) mailbox

1. Press MENU/EXIT key to enter the menu.
2. Enter speed access No. 04 and wait.
3. Enter personal box number (1-16), press ENTER.
4. Use ▲ or ▼ keys to select CONFIDENTIAL, press ENTER.
5. Enter a 4-digit numeric password (0000-9999), press ENTER.
6. Repeat steps 3 to 5 until the desired number of confidential mailboxes has been created (up to 16).
7. Press MENU/EXIT to return to standby mode.

Changing password/closing mailbox

If there is a need change the 4-digit password that is assigned to a confidential box or a mailbox is to be closed for some reason, do as instructed in the following. Speed access No. 04.

Note: A mailbox must be empty before it can be modified or closed.

Changing password

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04 and wait.
3. Enter the number of the personal mailbox to be modified/deleted, press ENTER.
4. Press ENTER to select Password Change.
5. Enter the old 4 digit numeric password, press ENTER.
6. Enter a new 4-digit numeric password, press ENTER.
7. Press MENU/EXIT to return to standby mode.

Closing a mailbox

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04 and wait.
3. Enter the number of the personal mailbox to be modified/deleted, press ENTER.
4. Use ▲ key to select CLOSE, press ENTER.

English

5. At "Delete Box?", press ENTER.
6. Enter the 4 digit numeric password, press ENTER.
7. Press MENU/EXIT to return to standby mode.

Note: *If the message "Illegal Operation" is displayed during either process, the mailbox selected contains one or more messages and must be emptied before changes to the mailbox can be made.*

Printing confidential faxes

Each time the machine receives a confidential fax it will print a Confidential Reception Report automatically which lists the mailbox number(s) that received fax(es).

1. Press Menu/Exit to enter Menu.
2. Press ▼ to select Print from Memory, press ENTER or ►.
3. Press ▼ to select Print Personal Box, press ENTER or ►.
4. Enter the personal mailbox number (1-16) holding any messages, press ENTER.
5. Enter the 4-digit password for the mailbox, press ENTER.
6. Message will be printed and machine will return to standby.

Note1: *If no message is stored in the personal mailbox, a message to that effect will be displayed.*

Note 2: *If you wish to delete a message without printing, when the "Printing" message is displayed, press STOP. When prompted to cancel, press ENTER to cancel without printing.*

Relay broadcasting

Relay broadcasting allows one fax machine to send a document to another, which then re-sends (broadcasts) the document to a number of other locations.

OKIFAX 5750 fax machines are capable of initiating a relay broadcast but will not function as a key relay station (relay broadcast delivery after receipt of relay broadcast or a single transmission). OKIFAX 5950 fax machines are capable of initiating relay broadcasts and operating as a key relay station. Key relay stations must be compatible models or have a sub-address relay function for this function to operate correctly.

When setting up a fax machine for relay broadcasting (initiating or key relay station), relay groups and relay passwords are entered into the fax machine along with any requirement for a return report. When acting as a key relay station, the fax machine can also be set to print a fax transmission after it has carried out a relay broadcast (speed access No. 27).

Note 1: *Relay groups can only contain telephone numbers or e-mail addresses and NOT a combination of telephone numbers and e-mail addresses.*

Note 2: *Relay broadcasts cannot be received by fax machines that do not have a password transmission function.*

Sending relay broadcasts

Before sending documents in a relay broadcast operation, the 4-digit relay password of the relay station and 2-digit identification numbers of the remote stations (or groups of remote stations) must be obtained. After making a relay transmission, the key relay station can send a report confirming the completion of the broadcast. This report is sent to the location specified by the telephone number programmed in the RELAY REPORT NO. function. For this machine to receive the report, program its telephone number as the relay report number.

Initiating relay broadcasts

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Press ▼ to select RELAY INITIATE TX, press ENTER or ►.
4. Enter the password (4-digit number) of a key relay station and press ENTER.
5. Enter the two digit number of the remote station and press ENTER.
6. Enter the desired location using the Speed Dial number or numeric keypad and press START.
7. The machine will scan the document(s) into memory and begin faxing to the key relay station.
8. If all memory is used, the machine will offer to send pages scanned so far.
9. To send scanned pages, press ENTER.

English

Programming relay report destination

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select LOCATION PROGRAM, press ENTER or ►.
3. Press ▼ to select RELAY REPORT NO., press ENTER or ►.
4. Enter the telephone number of desired location using numeric keypad (40 characters max.), press ENTER.
5. Press MENU/EXIT to return to standby mode.

Programming relay broadcast mailboxes

Relay broadcast mailboxes are personal mailboxes that have been programmed to operate in relay broadcast mode.

Note: Only personal mailboxes on OKIFAX 5950 fax machines can be programmed to operate in relay broadcast mode.

Creating relay broadcast mailboxes

1. Press MENU/EXIT key to enter the menu.
2. Enter speed access no. 04, wait.
3. Enter personal box number (1-16), press ENTER.
4. Use ▼ key to select RELAY BROADCAST, press ENTER.
5. Enter the 4-digit password (0000-9999), press ENTER.
6. Select the relay broadcast entry using either a Speed Dial key or group number. Press ENTER to register the location.
7. After all locations have entered, press START.
8. Press MENU/EXIT to return to standby mode.

Changing password/location/closing mailbox

If there is a need change the 4-digit password that is assigned to a relay broadcast mailbox, or change its location, or close it some reason, do as instructed in the following. Speed access No. 04.

Note: A mailbox must be empty before it can be modified or closed.

Changing password

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04, wait.
3. Enter the number of the personal mailbox to be modified, press ENTER.
4. Press ENTER to select MODIFY.
5. Enter the old 4 digit numeric password, press ENTER.
6. Press ENTER to select PASSWORD CHANGE.
7. Enter a new 4-digit numeric password, press ENTER.
8. Press MENU/EXIT to return to standby mode.

Changing location

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04, wait.
3. Enter the number of the personal mailbox to be modified, press ENTER.
4. Press ENTER to select MODIFY.
5. Enter the old 4 digit numeric password, press ENTER.
6. Press ▼ to select LOCATION CHANGE, press ENTER.
7. Select the new relay broadcast entry using either a Speed Dial key or group number. Press ENTER to register the location.
8. After all new locations have entered, press START.
9. Press MENU/EXIT to return to standby mode.

Deleting a location

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04, wait.
3. Enter the number of the personal mailbox to be modified, press ENTER.
4. Press ENTER to select MODIFY.
5. Enter the old 4 digit numeric password, press ENTER.

English

6. Press ▼ to select LOCATION CHANGE, press ENTER.
7. Press ENTER to confirm.
8. Press ▼ to select BY DISPLAY, press ENTER.
9. Use ▼ to select the location for deletion, then press CLEAR.
10. Press MENU/EXIT to return to standby mode.

Closing a mailbox

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 04, wait.
3. Enter the number of the personal mailbox to be closed, press ENTER.
4. Use ▲ key to select CLOSE, press ENTER.
5. At CLOSE BOX? message, press ENTER.
6. Enter the 4 digit numeric password, press ENTER.
7. Press MENU/EXIT to return to standby mode.

Note: *If the message "Illegal Operation" is displayed during any of the above processes, the mailbox selected contains one or more messages and must be emptied before changes to the mailbox can be made.*

Polling transmission/reception

Polling is a process in which documents are loaded into a machine, and the machine is then set to wait for a call from a remote location before faxing. If the local machine is set to hold data in memory for transmission to a remote machine when contacted, the procedure is called *polling transmission*. Similarly, if the machine calls a remote machine and receives a fax from it, the procedure is called *polling reception*.

Bulletin polling (box)

This feature enables remote machines to contact this machine and poll data from specified personal mailboxes until all the documents stored have been retrieved. Before bulletin polling can be conducted, personal mailboxes must be opened for storage of the documents to be scanned.

The following procedures explain the opening of personal mailboxes and how to set the machine for bulletin polling, respectively.

Creating bulletin polling mailboxes

1. Press MENU/EXIT key to enter the menu.
2. Enter speed access No. 04 and wait.
3. Enter personal box number (1-16), press ENTER.
4. Use ▲ or ▼ keys to select BULLETIN POLLING, press ENTER.
5. Repeat steps 3 and 4 until the desired number of bulleting polling mailboxes has been created (up to 16).
6. Press MENU/EXIT to return to standby mode.

Setting bulletin polling

1. Load the documents to be stored for polling.
2. Press MENU/EXIT to enter the menu.
3. Press ▼ to select POLLING TX/RX, press ENTER or ►.
4. Press ENTER to select POLLING TX.
5. Press ENTER to select BULLETIN POLL (BOX).
6. Enter a personal mailbox number (1-16), then press ENTER after entering each mailbox number.
7. Document(s) will be scanned and stored in memory and display will indicate that you have a bulletin message in memory.

Printing documents scanned into memory for bulletin polling

If there is a need to print out the document(s) scanned into memory for bulletin polling, use the following procedure to print documents stored in personal mailboxes.

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select Print from Memory, press Enter or ►.
3. Press ▼ to select PRINT PERSONAL BOX, press ENTER or ►.
4. Enter the personal mailbox number (1-16) that is holding the document, press ENTER.

English

5. Message will be printed and machine will return to standby.

Note 1: *If no message is stored in the personal mailbox, a message will be displayed indicating that there is no data in memory.*

Note 2: *If you wish to delete a message without printing, when the "Printing" message is displayed, press STOP. When prompted to cancel, press ENTER.*

Memory polling

This feature enables one remote machine to contact this machine and poll data directly from memory. After contact, data is deleted from memory after the polling operation is completed.

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Press ▲ to select POLLING TX/RX.
4. Press ENTER to select POLLING TX.
5. Press ▼ to select MEMORY POLL, press ENTER.
6. Document(s) will be scanned and stored in memory and a message indicating that there are documents waiting to be polled will be displayed.

Memory polling (bulletin)

This feature enables remote machines to contact this machine and poll data directly from memory until all of the stored documents have been retrieved. Documents loaded into memory and set for bulletin poll will remain in the memory until deleted manually.

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Press ▲ to select POLLING TX/RX.
4. Press ENTER to select POLLING TX.
5. Press ▼ to select MEMORY POLL (BULL), press ENTER
6. Document(s) will be scanned and stored in memory and a message indicating that there are documents waiting to be polled will be displayed.

Document tray polling

This feature enables remote machines to poll the documents set in the document tray (ADF).

1. Load the document(s).
2. Press MENU/EXIT to enter the menu.
3. Press ▲ to select POLLING TX/RX.
4. Press ENTER to select POLLING TX.
5. Press ▼ to select FEEDER POLL, press ENTER.
6. Display will show that there are documents waiting to be polled.

Polling reception

This machine is capable of polling documents from remote machines. However, the programming of polling reception is limited to only one machine at a time. After a polling operation has been completed, the polling of another machine is possible.

1. Press MENU/EXIT to enter the menu.
2. Press ▲ to select POLLING TX/RX, press ENTER.
3. Press ▼ to select POLLING RX, press ENTER.
4. Enter the mailbox numbers if required, maximum of 20 characters (0-9, space, *, #), press ENTER.
5. Enter the desired location using the Speed Dial keys or the numeric keypad.
6. Press START to begin polling.

Printing or cancelling faxes polled into memory

This feature enables the retrieval or clearing of faxes stored in memory after the polling of documents from remote machines. The feature can also be used to print out documents scanned into the machine for Memory Polling and Memory Polling (Bulletin) communications.

1. Press MENU/EXIT to enter the menu.
2. Press ENTER to select PRINT FROM MEMORY.
3. Press ▼ to select PRINT MEMORY POLL, press ENTER or ►.

English

4. Faxes stored in memory are printed, and the machine then returns to standby mode.
5. To cancel the message stored without printing, press STOP before the documents have printed. Then press ENTER to confirm. The machine returns to standby mode.

Call forwarding

Forwarding

If a forwarding number has been entered, by setting the AUTO ANSWER mode to FWD, incoming calls will be forwarded to the number specified. One number of up to 40 characters (0-9/*/#/+ /Pause/Hyphen/Space) can be entered.

Setting forwarding number

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select LOCATION PROGRAM, press ENTER or ►.
3. Press ▼ to select FORWARDING NO., press ENTER or ►.
4. Enter the telephone number, press ENTER.
5. Press MENU/EXIT to return to standby mode.

Setting Auto Answer mode to forward

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select SETUP, press ENTER or ►.
3. Press ▼ to select MACHINE SETTINGS, press ENTER or ►.
4. Press ▼ to select AUTO ANSWER MODE, press ENTER.
5. Press ▼ to select FWD, press ENTER.
6. Press MENU/EXIT to return to standby mode.

Forwarding on paper or toner error

When the machine is operating under any of the answering modes except FWD, TEL or MEM and this function is activated, there is a reliable backup against the problems of paper or toner shortages. If the machine detects no more paper or insufficient toner, it will forward incoming faxes

English

to a predetermined location automatically. One number of up to 40 characters (0-9/*/#/+Pause/Hyphen/Space) can be entered. This function can be used after entering a forwarding location.

1. Press MENU/EXIT to enter the menu.
2. Use ▲ or ▼ keys to select LOCATION PROGRAM, press ENTER or ►.
3. Press ▼ to select FORWARDING P-ERR, press ENTER or ►.
4. Enter the telephone number, press ENTER.
5. Press MENU/EXIT to return to standby mode.

Note: Forwarding of faxes received as confidential or polling is not possible, even in FWD mode.

Dual access

A number of tasks can be performed simultaneously using the unique *dual-access* feature. This capability reduces the waiting time otherwise required between operations, and thus improves productivity.

During fax transmission

After a document has been scanned into memory and transmission has begun, it is possible to:

- Load another document and prepare it for transmission. This document will be scanned into memory while the preceding document is being transmitted. Transmission settings can be single or multiple location or even delayed. Additional documents can be loaded, scanned and set for transmission as long as memory is available. After each transmission is completed, the next set of documents loaded will be processed automatically.
- Register Speed Dial or Group telephone numbers.
- Make local copies.
- Continue operations in no paper / no toner status, with messages printed automatically after replenishing the paper or toner.

English

During fax reception

When receiving a fax, it is possible to:

- Load another document and prepare it for transmission. A document can be scanned into memory while a fax is being received. Transmission settings can be for single or multiple location or even delayed. Additional documents can be loaded, scanned and set for transmission as long as memory is available. After the initial fax has been received and connection terminated, the machine will begin transmitting the documents loaded automatically.
- Register Speed Dial or Group telephone numbers.

When making copies

When making copies, it is possible to:

- Receive faxes while copies are being printed (if the machine is set to receive faxes into memory).

When printing from memory

When printing from memory, it is possible to:

- Load another document and prepare it for transmission. A document can be scanned into memory while a fax is being received. Transmission settings can be for single or multiple location or even delayed. Additional documents can be loaded, scanned and set for transmission as long as memory is available. After the location has been entered transmission will begin.
- Register Speed Dial or Group telephone numbers.

Internet fax

Internet fax function is an option available on this fax machine. Please refer to Appendix C for details.

Fax2Net service

A separate contract for Fax2Net is required to use this service. Refer to Appendix G for details.

Chapter 6 - Customising

Viewing current settings

Before making changes, it is helpful to print out a list of current settings as an aid to determine features and functions which need to be changed. The Configuration Report is best for this purpose.

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select REPORT PRINT, press ENTER or ►.
3. Press ▼ to select CONFIGURATION, press ENTER or ►.
4. Report will print out.
5. If print out of report is not required, press STOP.

Operation functions

Remote diagnosis

The remote diagnostics feature allows service personnel to remotely dial and service the machine. Available settings are ON and OFF. Speed access No. 14.

Transmission (TX) mode default

This function allows the machine's default settings for original document condition and transmission scanning resolution (TYPE OF ORIGINAL and RESOLUTION keys, respectively) to be changed. The factory default settings are standard (STD) and normal (NORMAL). If faxes which require some other combination are often sent or received, use these function settings to adjust machine operations to best fit the situation. During the programming sequence, the new default combination will be indicated on the control panel. Speed access No. 15.

English

Memory full save

With features like group dialling, “call origination” starts after an entire document or set of documents is read into memory. If a document memory overflow occurs the display will prompt whether the documents already scanned in memory should be sent or deleted. The user then has the choice of which option is appropriate. If the user makes no response after a short time period then the documents will be automatically sent if this function is defaulted to ON, or deleted if the default is set to OFF. Available settings are ON and OFF. Speed access No. 17.

Instant dial

In the ON state, the document is scanned into memory and dialling starts immediately. Although the function relies on memory availability, connection to the remote location is confirmed and the document is transmitted faster when memory is available. If it is set to OFF, the machine first confirms contact with the remote location and then transmits the document reading from the document tray (without scanning into memory). Speed access No. 18.

Restrict access

This function controls whether or not machine operation is restricted or not. In the ON state, if RESTRICTION ID has been programmed, users must enter a password before being allowed access to the machine’s functions. Set to OFF, no password is required even if RESTRICTION ID has been programmed. Speed access No. 19.

ECM function

The error correction mode (ECM) function is provided to improve communications in areas where telephone line conditions are very poor. Available settings are ON and OFF. Speed access No. 20.

Sender ID (ON/OFF)

This function determines whether the Sender ID is to be printed on the transmitted fax at the remote site. Available settings are ON and OFF: set to ON, the ID is included on the fax. Speed access No. 23.

Power save mode

When this function is set to ON, the machine will automatically switch to a low-energy mode after being idle for 10 minutes. Available settings are ON and OFF. Speed access No. 26.

Pulse dial rate

If the machine is set for pulse dialling, this function controls the rate of the dialling pulses (which vary by country). Available settings are 10, 16 and 20 pulses per second. Speed access No. 46.

Pulse make ratio

If the machine is set for pulse dialling, this function controls the make rate of the dialling pulses. Available settings are 33, 39 and 40%. Speed access No. 47.

Pulse dial type

If the machine is set for pulse dialling, this function controls the type of pulse dialling it uses (types of pulse dialling vary by country). Available settings are N, 10-N and N+1. Speed access No. 48.

T/F timer

When set to T/F (TEL/FAX), the machine will automatically distinguish between incoming voice and fax communications. The T/F timer controls how long the machine waits for the call to be answered before switching to FAX mode. Available settings are 20 and 35sec. Speed access No. 62.

CNG Count

When set either in the T/F or TAD modes, the machine detects the type of signal (calling tone, CNG) sent from the remote location and initiates fax reception if required. This function sets the CNG detection number. The available setting is 1-5 times (numeric keypad input). Speed access No. 65.

Ring response

This function controls how long the machine waits before answering an incoming call. The available settings are 1 ring, 5, 10, 15 and 20sec. Speed access No. 66.

English

Distinctive ring

Distinctive ringing is a service offered by some telephone service providers that allows different telephone numbers to be assigned to a single line, each number being assigned a distinctive ring. When an incoming call is received, it is possible to identify the number being call by the assigned ringing pattern. When set to ON, fax reception begins only after a programmed ring pattern is detected. If no ring pattern has been programmed, the ring pattern defined for each country is used for detection as the default setting. Available settings are ON (detected), OFF (not detected) and SET (programmed). Speed access No. 67

Changing operation functions

1. Press MENU/EXIT to enter the menu.
2. Input the speed access number of the parameter to be changed, wait.
3. When the display for the desired parameter is shown, press ▲ or ▼ to select the setting (or enter data where required), press ENTER.
4. Press MENU/EXIT to return to standby mode.
5. Repeat steps 1 to 4 until finished setting parameters.

Memory password

This is a 4-digit numeric password used when the machine is operating in the Memory Only Reception Mode (MEM). People who do not know the password cannot make changes to or print memory data when the machine is in this mode. Registration of just one password is possible. Speed access No. 05.

Setting or clearing Memory Password is as follows:

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 05 and wait.
3. Enter the 4-digit numeric password using numeric keypad, press ENTER.
4. If there is no current password registered, this password will now be registered and the machine will return to standby mode.
5. If there was a password registered previously and you have entered it correctly, display will show "PASSWORD CLOSE?" If numbers do not match, display will show "INVALID PASSWORD". At

“PASSWORD CLOSE” press ENTER to confirm password cancellation., then press MENU/EXIT to return to standby mode.

Restricted access ID

This is a 4-digit numeric password that is must be input to gain access to machine operations when the machine is set in the Restrict Access mode. Up to 24 RESTRICTION ID passwords can be registered at one time. Speed access No. 06.

Setting restricted access ID

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 06 and wait.
3. Enter the department number (1-24), press ENTER.
4. Enter the 4-digit password (0000 to 9999) using numeric keypad, press ENTER.
5. If number is already registered, display will show “ALREADY EXIST”.
6. Enter another 4-digit ID number, press ENTER.
7. Repeat steps 3 to 6 until all desired ID numbers have been registered.
8. Press MENU/EXIT to return to standby mode.

Cancelling restricted access ID

1. Press MENU/EXIT to enter the menu.
2. Enter speed access No. 06, wait.
3. Enter the department number (1-24), press ENTER.
4. Enter the 4-digit password (0000 to 9999) using numeric keypad, press ENTER.
5. If ID matches registered number, display will show “ID CLOSE?”. If no match with registered number, display will show “INVALID ID”.
6. At “ID CLOSE” press ENTER to confirm ID cancellation.
7. Press MENU/EXIT to return to standby mode.

English

Service function settings

In many instances, the settings of service functions can affect the way a facsimile machine operates. If there is a need to have any of the following settings changed, please contact your supplier or request service.

Long document scanning/transmission (Long Doc. Scan)

Normally the machine will not scan documents longer than 356mm (14in.). With this function set to ON, the machine is capable of scanning longer documents up to a length of 1500 mm with a maximum transmission time of one hour.

MYD/DMY

This setting controls how the machine displays and prints the date (mm/dd/yy or dd/mm/yy).

Time/date print

This setting controls if and how the time and date are printed on received faxes. The machine can be set to print or not print time and date, print time and date at the top of the first page only, or print time and date at the top of every page.

TSI print

With this setting in the ON state, the telephone number of the remote machine is printed at the top of each page of the fax received.

Options

Multifunction peripheral (MFP) PC interface kit

The MFP PC Interface Kit is basically a software package that allows your machine to interface with a computer connected via a parallel data cable. Once the optional MFP software is installed in the computer and a parallel data cable attached to connect the two devices, the fax machine can provide PC Fax, Printer and Scanner operations. For further details, please see Appendix B.

Internet fax and network printer/scanner

The internet fax and network printer/scanner option allows the fax machine to operate as a network printer with a variety of LAN systems and protocols including Novell and Microsoft. Installation of the network interface card enables the option of utilizing Network Print Service: 10-page per minute, 600dpi printing with Hiper-W print emulation. It also becomes possible to receive fax images as e-mails and to transmit fax images as e-mails. For further details, please refer to Appendix C.

ISDN G4 board

The ISDN G4 Board raises the machine operability to ITU-T G4 classification with digital communications at 64Kbit/s. Although PSTN (public switched telephone network) settings are deactivated when installed, the system is equipped with a setting to activate an automatic fallback function that enables communications in either G3 or G4 mode, depending on the classification of the remote machine. For further details, please see Appendix D.

This board also supports dual mode communication, which means that a G4 signal and a G3 signal can be received or transmitted simultaneously.

G3 dual line function

This function requires the G3 Option Board to be mounted. Like Dual Mode Communication, it is possible to concurrently communicate on two lines. For further details, please refer to Appendix E.

600 dpi communication

 
 
 
 
 
This function requires the optional 8 Mb memory to be installed. When installed, the fax machine can transmit/receive faxes and make copies at a resolution of 600 dpi. For further details, please refer to Appendix F.

FAX2NET service

Fax2Net is a special fax communications service that gives users the convenience of utilizing the combination of a fax machine and the Internet to send and receive data including e-mail messages and web page data. For further details, please refer to Appendix G.



English





Chapter 7 - Reports

Understanding reports

A number of useful reports are provided to show the machine's current settings, programming and operations. Refer to the following list of reports available to determine which of those is needed for a particular situation. Some reports print automatically after completion of operations, while others require retrieval by users. Please refer to "Printing Reports" for instructions on how to print those reports that are not printed automatically.

Reports list

Message confirmation report

This report provides information about the last single-location fax transmission or polling transmission. Information in the report includes: Faxing date, amount of time to send or receive fax (S,R-Time), location ID or telephone number of the remote machine (Distant Station ID), communications mode, number of pages in communication, results of communication, and service codes.

If an error occurred during communication, a portion of the page where the problem occurred can be printed after the report.

Confidential reception report

This report is automatically printed each time the machine receives a confidential message into a mailbox. Information in this report includes: Faxed date, amount of time spent receiving the fax (S,R-Time), location ID or telephone number of the remote machine (Distant Station ID), number of the mailbox holding the fax, number of pages received, results of communication, and service codes.



English

Broadcast entry report

Each time a multiple-location transmission is programmed, the machine will give the option of printing this report to confirm location entries. Information in this report includes: Location ID of the Speed Dial numbers selected, and telephone numbers entered manually using the numeric keypad.

Broadcast message confirmation report

This report can be used to confirm the results of multiple-location transmissions. Information provided in this report includes: Date and time the transmission started, amount of time required to complete the transmission, and the location ID, number of pages sent and results of the communication for each location.

Power outage report

If power to the machine is interrupted, the failure may interfere with operations such as delayed transmissions, messages received into memory, etc. As soon as power to the machine is restored, it prints out a report automatically to alert users of the power outage.

Function list

 
This report will print out a list of the user functions available for setting via the menu shown on the display panel. (User Function Tree)

Configuration

This is a list of the current operational settings of the machine. The information includes: current User Function settings (except for One-Touch key parameters, which appear in the Telephone Directory), sender ID (ID=), TSI/CSI (telephone number of machine), and dialling parameter settings.

Telephone directory

This report provides a complete listing of all of the telephone numbers programmed into the machine's Speed Dial numbers (One-Touch keys and two- and three-digit numbers). The information includes: Location ID and primary telephone number for each programmed One-Touch key and two- and three-digit Speed Dial number, the alternate (secondary) tele-





English

phone number (OR) for each One-Touch key, parameter settings for each One-Touch key (PRM. ECHO).

Group directory

This report provides a list of the telephone numbers programmed into groups assigned to Speed Dial numbers. Listing can be provided in alphabetical listings of the names of the groups. (This report is not capable of printing all groups, only the selected group will be printed.) The information includes: List title, date and time of list, sender ID, group number and ID, and telephone number.

Activity report

This report provides a record of the last 30 communications made by the machine. The information provided includes: Respective amounts of time the machine spent sending and receiving faxes: date, time and duration (S,R-TIME) of each transmission or reception; name or telephone number of the remote machine communicated with (Distant Station ID); communication mode for each transaction; number of pages in each communication, results of each communication, and service codes. If you were sending a fax, the telephone number or the Location ID will be printed. For faxes received, the personal ID or telephone number of the remote machine will be printed.

Note: This report does not contain the results of messages received without errors or received into memory.

Active memory files

This report provides a list of all the messages stored in the machine's memory, including both documents waiting for transmission and documents received but not yet printed. The information provided in this report includes: date and time a message was scanned into memory for transmission, name or telephone number of each remote location, communication mode for each activity and number of pages in each communication. For reception, the polling messages and the messages in personal boxes are printed separately.

Note 1: For transmission, the telephone number or Location ID (location name) of the remote location will be printed. For reception, the number of entry and total pages are printed.

English

Note 2: One use for this report is to list the session and message numbers of faxes stored in memory if there is a need to erase one.

Protocol dump

This report is printed out in the event of incomplete communications, and can be helpful in determining the cause of interruption. Send the report to your supplier or service centre if so requested.

Help key printout

This report provides a detailed list of all menus and functions in addition to instructions on how to perform certain key features on the fax machine.

Printing reports

After sending a fax, press ENTER for a message confirmation report.

To print other reports:

1. Press MENU/EXIT to enter the menu.
2. Press ▼ to select REPORT PRINT, press ENTER or ►.
3. Use the ▲ or ▼ keys to select the report to be printed, press ENTER or ►.
4. Print out all reports required, then press MENU/EXIT to return to standby mode.

Codes used in reports

Result codes

Result codes indicate the results of communications.

Code	Explanation
BUSY	The line of the remote location was busy or there was no answer.
CANCL	A confidential message was erased after being held in memory for 10 days.
COMP.	A multiple-location transmission was completed.
COVER	The machine's cover was opened during the communication.
NO	Transmission or reception failed due to a communications error.
OK	Transmission or reception was completed successfully.
PUNIT	There is a problem with the printing unit. Contact service representative.

English

Code	Explanation
R_JAM	A paper jam occurred while receiving a fax, when the machine was unable to receive the entire message in memory.
S_JAM	A document jam occurred in the machine sending the fax.
PAPER	Paper ran out during reception and there was insufficient memory available for the entire message.
STOP	Stop key was pressed, ending the session.






Communication codes

Communication codes indicate the communications mode used for a communication.

Code	Explanation
B.C.	Multiple-location transmission (broadcast).
CONF=(BOX NO.)	Fax received to a personal mailbox.
CALLING	A communication initiated by the local machine.
CALLED	A communication initiated at a remote location.
POLLED	Polling transmission initiated
POLLING	Polling reception by the local machine
FWD	Forwarding
BATCH	Batch transmission
POLL=(BOX NO.)	Bulletin polling



     English




Chapter 8 - Troubleshooting

Clearing document jams

When a document becomes caught in the machine during a faxing or copying operation, the machine will beep and the display will show an error message. If the document looks to be positioned straight in the document tray, try pressing the STOP key to feed the document the rest of the way through the machine. If this fails, do the following:

1. Turn off the power switch.
2. Grasping the control panel in the area above the document tray (between the document guides), pull up and swing it back on its hinges.

Note: Open the control panel fully, making sure not to damage the separation rubber

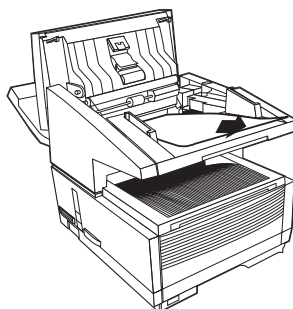

3. Pull out the jammed document.
4. Return the control panel to its original operating position, and push down on it until it locks in place.
5. Turn power switch back on.

Clearing paper jams

If the machine shows a "PAPER JAM" or "NO PAPER" message on the display and the paper tray still contains paper, there may be one or more sheets of paper caught in the machine. To clear a paper jam, follow the instructions below.


English

Note: *If paper jams are experienced often, it may be due to the type of paper being used. Paper developed specifically for photocopying or laser printing should be used. Be sure to fan the paper before loading it into the paper tray.*


WARNING

BE CAREFUL OF HOT COMPONENTS MARKED BY THE CAUTION LABEL INSIDE THE MACHINE. DO NOT TOUCH UNDER ANY CIRCUMSTANCES.

1. Turn off the power switch.
2. Grasp the document tray from the bottom and lift up, swinging the document tray and control panel up and back.

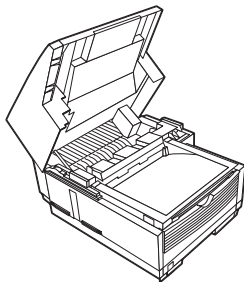

3. Press on the latches on both sides of the copier stacker until the cover of the image drum compartment is clearly released and pops up. Lift up and back, revealing the image drum unit.

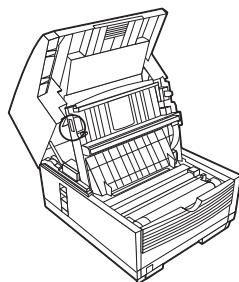


Caution:


Never expose the drum to light for more than 5 minutes. Do not touch the green surface of the drum.

English


4. Take hold of the image drum by its ends using both hands and lift it out of the machine. Set it aside on a clean, dry surface out of direct sunlight.

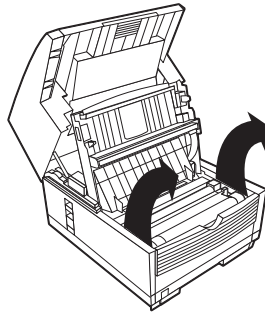

5. Carefully pull out any paper caught inside the machine. Try to avoid tearing fragments of paper off inside the machine.

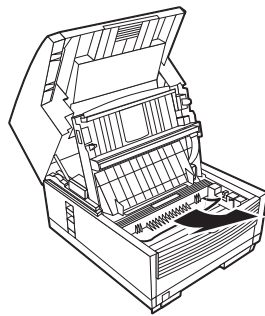

6. Pull out the paper tray and remove any paper caught in the feeder or damaged in the tray itself.

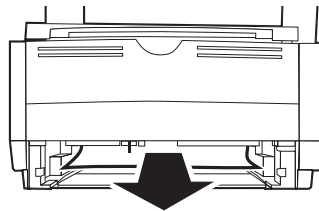

7. Load the paper tray to a sufficient level, pushing the paper down so that the plastic corner tabs are above the paper.
8. Slide the paper tray gently but firmly back into the machine until it latches in place.

English

9. Place the image drum unit back into the machine. Press down firmly on the locations marked "PUSH" (immediately above the toner well) until the image drum snaps into place.
10. Close the cover to the image drum compartment pushing down on it until both latches catch.
11. Return the document tray to the normal working position.
12. Turn power switch back on.

Toner cartridge replacement

The number of pages that can be printed with a toner cartridge depending very much on the type of documents printed. The first toner cartridge installed in a new image drum unit will yield fewer printed pages because the image drum unit itself has to be filled.

When the machine displays a message requesting a new toner cartridge, the toner cartridge should be replaced by a new cartridge immediately. However, if the print density is still very good, the cartridge can continue to be used until the density becomes noticeably poor. If the print density becomes low even before the machine displays the toner warning, gently wipe the lens surface of the LED array (see following instruction steps). If the print density does not improve, replace the toner cartridge.


Caution:

Your machine will not operate with an incorrect toner cartridge installed. Be sure to read the packaging carefully before purchase and installation of a new toner cartridge.


WARNING

TAKE CARE WHEN HANDLING THE TONER CARTRIDGE. DO NOT LET TONER SPILL ON CLOTHING OR OTHER POROUS MATERIALS. SEE THE SECTION ON SAFETY AT THE BEGINNING OF THIS MANUAL.


1. Turn off the power switch.
2. Grasp the document tray from the bottom and lift up, swinging the document tray and control panel up and back.

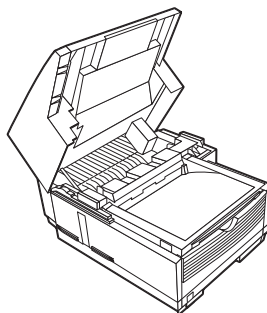

3. Press on the latches on both sides of the copier stacker until the cover of the image drum compartment is clearly released and pops up. Lift up and back, revealing the image drum unit.

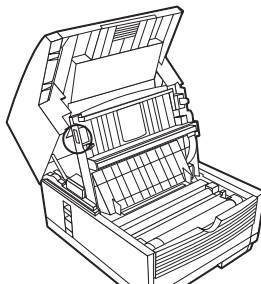


4. Pull back on the grey lever at the right end of the toner cartridge, bringing the lever up and all the way back. Carefully remove the old cartridge from the image drum unit, and set it aside on an old newspaper, magazine, etc.
5. Remove the new toner cartridge from its packaging and shake gently to evenly distribute the toner. (Wrap the old toner cartridge in the packaging of the new cartridge before throwing it away.)

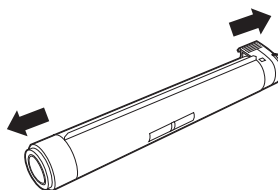


6. Carefully peel off the white plastic tape from the bottom of the cartridge. With the ridged side facing up and the grey lever to the right, insert the new cartridge into the image drum unit left side first.


English

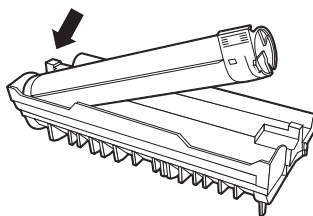

7. Once the cartridge is in place, push the grey lever forward and down, securing the cartridge and releasing the toner.

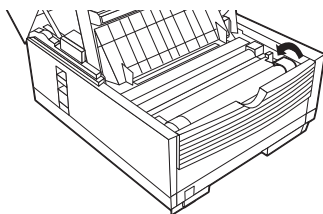

8. Using the cleaning wipe provided in the package with the new toner cartridge, gently wipe the full length of the LED array (1).

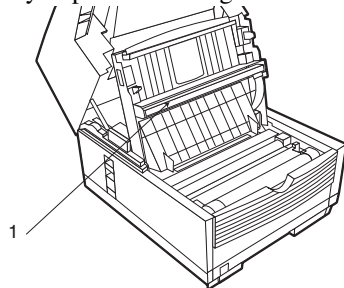

9. Close the cover to the image drum compartment pushing down on it until both latches catch.
10. Return the document tray to its working position.
11. Turn power switch back on.

Image drum unit replacement

If the faxes received become unusually light or have vertical streaks in them while there is sufficient toner remaining, or if the machine display shows “CHANGE DRUM SOON”, the machine most likely requires a new image drum unit.

English

The service life of an image drum depends on a number of factors including temperature and humidity, the type of paper used, and the number of pages per job. Contact your supplier to order a new unit.


Caution:

Your machine will not operate with an incorrect image drum installed. Be sure to read the packaging carefully before purchase and installation of a new image drum.


Caution:

Always handle the image drum unit by the ends. Never expose the drum to light for more than 5 minutes. Do not touch the green surface of the drum.

1. Turn off the power switch.
2. Grasp the document tray from the bottom and lift up, swinging the document tray and control panel up and back.

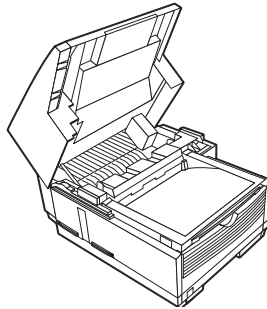


3. Press on the latches on both sides of the copier stacker until the cover of the image drum compartment is clearly released and pops up. Lift up and back, revealing the image drum unit.

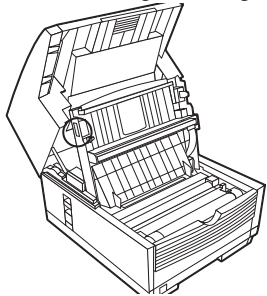

English


4. Remove the old image drum unit (complete with toner), and set it aside on an old newspaper, magazine, etc.

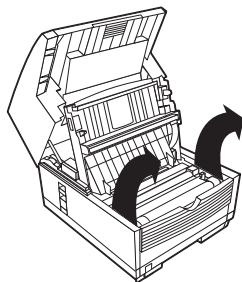

5. Remove the new image drum unit from its packaging and place it in the machine. (Wrap the old unit in the packaging of the new unit before throwing it away.)
6. To ensure that the image drum is positioned correctly, press down firmly on both locations of the image drum marked "PUSH".
7. Install a new toner cartridge (see previous instructions for Toner Cartridge Replacement).
8. Close the cover to the image drum compartment pushing down on it until both latches catch.
9. Return the document tray to its working position.
10. Turn power switch back on.
11. After power has been fully restored and the display is functioning, press Menu/Exit to enter Menu.
12. Press ▼ to select Counter settings, press ENTER or ►.
13. Press ENTER or ► to select DRUM COUNT, press ENTER.
14. Press CLEAR to reset the drum counter.
15. Press MENU/EXIT to return to standby mode.

Cleaning scanner path

To ensure the best possible scanning quality, paper lint and dust should be cleaned from the area around the contact image sensor periodically. To clean the scanner path, open the control panel and gently wipe the area over the scanner (1) as shown below.

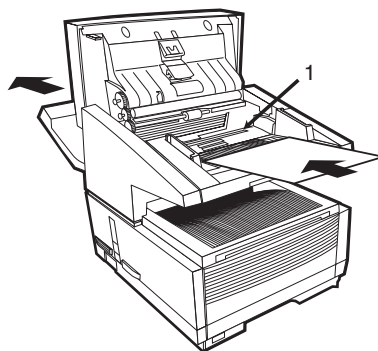

Reading counters

Three counters are accessible to machine operators: drum, printing and scanning. The first tracks drum usage and can be reset each time the image drum unit is replaced. The latter two keep track of the number of pages printed and scanned by the machine over its lifetime. If a problem is experienced with the machine, a service representative may ask for these counters to be checked (refer to Counters in Chapter 4).

Problem checklist

This machine is a very complex device equipped with many features and functions which allow it to operate in different ways. Operating problems may be due to improper programming. If a problem occurs, read through the list of problems and solutions before calling for service.

The display is blank. Check the power cable to make sure it is firmly plugged into the machine and wall socket. Check the wall socket outlet to make sure that it has power. Check that the wall socket and machine are switched on.

Nothing happens when control panel keys are pressed. Turn the machine off, wait 10 seconds, then turn it on again.

“PAPER OUT” is shown on the display even though there is paper in the paper tray. Make sure that the paper is firmly stacked in the tray. Check for a paper jam in the machine.

Documents jam. Check documents for wrinkles, tears or other damage. Make sure there are no staples or paperclips attached to the document(s) and that the paper is clean and dry. Make sure the document width is

English

within the paper width limits of the machine. Try making a copy of the document on a photocopier and faxing the copy.

The machine will not dial a telephone number. Check the power cable and wall outlet. Make sure that the telephone line (not external telephone or handset) is connected to the LINE socket on the back of the machine. If an external telephone is installed, lift the handset and check for a dial tone. If there is no dial tone, there may be a problem with the telephone line. If there is a dial tone, the machine may be using the wrong dialling method (pulse or tone) for the region. If alternating tones are heard instead of dialling pulses and the region uses pulse dialling, refer to the MF/DP user function setting in Dialling/Incoming Call Parameters.

The display shows a communications error. This alarm indicates any of a number of problems. The machine may be incompatible with the remote machine, or the remote machine may not be able to perform the function requested of it such as polling or confidential faxing. The remote machine may also be out of paper or experiencing a paper jam. Bad telephone line conditions can also cause communication errors. Try sending the fax again and check to make sure that the correct telephone number is being dialled. If a prefix number must be dialled to get an outside line, or if the call is to an international destination, a pause may need to be entered (use the Pause One-Touch key) after the dial prefix or international dialling code to tell the machine to wait for a dial tone. If there are frequent problems communicating with a particular remote machine, try programming the telephone number into a One-Touch key, and then change the One-Touch parameters for that key (see dialling/Incoming Call Parameters). Lastly, either the local or remote machine may require servicing. Try sending a fax to another location to check the local machine.

Faxing is possible but the image of the document printed by the remote machine is very poor. If the faxed document has small type, complex illustrations, photos, or is very light or very dark, try changing the Resolution and Type of Original settings (see Loading Documents). Copy the document on the machine to determine how it will transmit. The problem may be caused by telephone line interference. Try sending the document again later.

Unwanted reports are printed out. Check the user function settings and turn off undesired reports (see Reports).

Fax sent but received message was completely blank. Make sure that the document is loaded face down before faxing.

English

Image of received fax is very poor. Contact the person sending the fax and ask them to change their Transmit Resolution and Type of Original settings. Ask the person to make a copy of the document on their machine to ensure that it is working properly. Then ask them to send the fax again. If there is still a problem, try making a copy of a document on the local machine to make sure it is working properly.

Dialling was tried with a Speed Dial number but nothing happened. Make sure that the Speed Dial number being used is programmed correctly. When dialling a two or three digit number, be sure to press Speed Dial before entering the number. Check to see if the Auto Start feature is turned off. If in the OFF state, Start must be pressed before dialling will commence.

Local machine will not answer the telephone or receive faxes. First check to see that the power cord is connected properly. Also check the reception mode setting of the machine. This machine will not receive faxes automatically in the manual answering mode [TEL] (see Machine Settings).

Documents received are light or have vertical streaks on them, and machine is not out of toner. Gently wipe the lens surface of the machine's LED array, and then check to see if the machine is working properly (see Toner Cartridge Replacement). If the machine still does not work properly, remove the image drum (see Image Drum Unit Replacement), tap the toner cartridge, and slowly swing it 20 to 30 degrees vertically several times. Be careful not to let the toner leak from the cartridge. If this does not work, the image drum unit may need to be replaced. Contact your supplier to get a replacement.

Machine is set for delayed transmission but it did not send. Check the display to make sure that the machine's clock is set to the correct time (see Clock Adjustment).

Machine will not poll a remote machine. Call the person at the remote machine and make sure that they have loaded documents and that their machine is set to polling transmission mode.

Machine is connected to a PBX but it is not possible to dial out. Be certain that the dial prefix is entered before the telephone number for each number dialled or programmed into the machine. Additionally, the machine must be programmed for PBX operation before it will work with a PBX (see Connecting to a PBX).

English

Machine always answers before its possible to use the external telephone. If an external telephone is connected, change the machine's ring response setting (see Customizing Operation Functions).

Faxes received sometimes look distorted. If the document received is wider or longer than the paper loaded in the paper tray, the machine automatically reduces the width or length of the document so that it will fit on the paper. This type of problem could also be communication related.

Reception of unsolicited faxes (advertising). Try using the closed network function (see Basic Operations).

The display shows a invalid toner cartridge. A toner cartridge that is not specified for use in this fax machine has been installed. Contact the nearest supplier for service.

The display shows a invalid image drum. A image drum that is not specified for use in this fax machine has been installed. Contact the nearest supplier for service.

Display Error Messages

The following table shows a list of error messages which may appear in the display under various operating conditions.

Operating condition	Display message	Explanation
DISPLAY IN STANDBY MODE	12:00 XXX MEMORY FREE 100%	Under normal operating conditions, the top line of the display shows the time and the answering mode: FAX, TEL, T/F, MEM, FWD, TAD or PC. The bottom line of the display shows the amount of memory available.
MEMORY OVERFLOW	12:00 XXX MEMORY OVERFLOW REFER TO USER GUIDE MEMORY FREE 5%	This message is displayed when memory becomes full. Sometimes the memory overflow message does not exist in memory.
2'ND TRAY TIMEOUT ERROR	12:00 XXX PRINTER ALARM2 REFER TO USER GUIDE MEMORY FREE 100%	Open and close the cover. If this does not clear the message, turn off the machine and contact your supplier for service.

Operating condition	Display message	Explanation
FAN MOTOR ERROR	12:00 XXX PRINTER ALARM3 REFER TO USER GUIDE MEMORY FREE 100%	Open and close the cover. If this does not clear the message, turn off the machine and contact your supplier for service.
FUSER ERROR	12:00 XXX PRINTER ALARM4 REFER TO USER GUIDE MEMORY FREE 100%	Open and close the cover. If this does not clear the message, turn off the machine and contact your supplier for service.
LAN BOARD I/F ERROR	12:00 XXX HSP ERROR REFER TO USER GUIDE MEMORY FREE 100%	This message is displayed if printing stops from your PC or the machine cannot receive a signal due to a network problem.
LAN DATA ERROR	12:00 XXX LAN DATA ERROR REFER TO USER GUIDE MEMORY FREE 100%	This message is displayed if printing stops from your PC or the machine cannot receive a signal due to a network problem.
ISDN BOARD I/F ERROR	12:00 XXX ISDN BOARD I/F ERROR REFER TO USER GUIDE MEMORY FREE 100%	Turn the power switch off and on. If this does not clear the message, turn off the machine and contact the nearest authorized supplier for service.
INVALID TONER CARTRIDGE	12:00 XXX INVALID TONER CART REFER TO USER GUIDE MEMORY FREE 100%	Please check to make sure you are using the correct toner cartridge. If you are using the correct toner cartridge, open and close the cover. If this does not clear the message, turn off the machine and contact the nearest authorized supplier for service.
INVALID IMAGE DRUM	12:00 XXX INVALID DRUM CART REFER TO USER GUIDE MEMORY FREE 100%	Please check to make sure you are using the correct image cartridge. If you are using the correct image cartridge, open and close the cover. If this does not clear the message, turn off the machine and contact the nearest authorized supplier for service.

English

Operating condition	Display message	Explanation
NEED TO CHANGE DRUM	12:00 XXX CHANGE DRUM SOON MEMORY FREE 100%	The image drum is nearing the end of its projected life. Make sure a new drum is available, and replace the drum when print quality begins to deteriorate.

Packaging for transport

If there is a need to transport the machine once it has been used, please follow the re-packaging procedure provided below.

Caution:

DO NOT ship the machine with the image drum unit installed in it unless the machine has never been used.

1. Remove the image drum unit and toner cartridge from the machine.
2. Place the image drum unit with toner cartridge still attached into a (black) polyethylene plastic bag and store it in a cool place away from direct sunlight.
3. Re-package the machine with the image drum unit removed.

Appendix A - Specifications and Functions List

Specifications

Category	Specification
Type / compatibility	Desktop transceiver / ITU-T G3, G4*
Applicable network	PSTN, PBX, ISDN*, LAN*
Transmission speed	33.6 - 2.4 kbps ITU-T V.34/V.17/V.27ter/V.21, Automatic fall back, 64kbps* (ISDN)
Communications	Half duplex (Full duplex at V.34 communication)
Coding scheme	MH/MR/MMR, JBIG (OKIFAX 5950 only)
Printing speed	10 pages per minute
Scan speed	1.5 seconds per page (STD) (OKIFAX 5950 only)
Transmission resolution	200 x 100 dpi (STD) 200 x 200 dpi (Fine) 200 x 400 dpi (Ex-Fine) 300 x 300 dpi (Ex-Fine) 600 x 600 dpi (Ex-Fine)*
Reception resolution	200 x 100 dpi (STD) 200 x 200 dpi (Fine) 200 x 400 dpi (Ex-Fine) 300 x 300 dpi (Ex-Fine) 600 x 600 dpi (Ex-Fine)*
Copy resolution	300 x 300 dpi (Fine) 600 x 600 dpi* (Ex-Fine) 600 x 400 dpi (Ex-Fine)
Print resolution	300 x 300 dpi 600 x 600 dpi
Halftone transmission	64 levels (greyscale)
Document size	US Legal to ISO A5
Recording paper	Plain paper (A4, letter, legal)
Effective scan width (max.)	ISO A4 208.6 mm for transmission and copy US Letter 215.4 mm for transmission 208.6 mm for copy
Weight (approx.)	14kg (excluding paper)
Display	LCD panel, 4 rows x 20 characters

English

Category	Specification
Dimensions (W/D/H)	360 x 472 x 352mm (excluding document tray)
Power	230VAC +15 to -14% (198-264V) 50/60Hz $\pm 2\%$
Operating conditions	Relative humidity 20-80% (non-condensing) Temperature 10 - 32°C
Memory capacity	OKIFAX 5750 2.5 Mbyte OKIFAX 5950 4.5 Mbyte
Optional memory	2 Mbyte / 4 Mbyte / 8 Mbyte
Document feed	50 sheets (A4, 80g/m ² (16-20lb)) max.

Note: Items marked * require the optional ITU-T G4 board, network interface card or 8 Mb memory option.

User functions tree

The following is a list of menu functions. Some items are accessible using a two-digit speed access number. In these cases the number precedes the function name in this list.

- Delayed TX
- Delayed Batch TX
- Priority TX
- Confidential TX
- Relay initiate TX
- Internet FAX*
 - Internet TX
 - Internet RX
- Polling TX/RX
 - Polling TX
 - Bulletin Poll (BOX)
 - Memory Poll
 - Memory Poll (BULL)
 - Feeder Poll
 - Polling RX
- FAX2NET Service*
 - Web retrieval
 - Broadcastingf
 - Payment Card Reg.

Print from Memory

- Print Memory Msg.
- Print Personal Box
- Print Memory Poll

Report Print

- Active Mem. Files
- Broadcast MCF
- Protocol Dump
- Telephone Directory
- Group Directory
- Configuration
- Function List
- Activity Report
- NIC Configuration*
- NIC Information*

Location Program

- Speed Dial
- Group
- Batch TX Time
- Forwarding No.
- Forward On P-ERR.
- Relay Report No.
- FAX Network Prg.

Setup

- Clock Adjustment
 - 00 Clock Adjustment
- ID/Password Prg.
 - 01 TSI/CSI
 - 02 TSI/CSI Option (requires G3 dual line option)
 - 03 Sender ID
 - 04 Personal Box
 - 05 Mem. Password
 - 06 Restrict ID
 - 07 ISDN TID (requires G4 option)
 - 08 ISDN Sub No. (requires G4 option)

Machine Settings

- 10 Auto Answer Mode
- 11 Monitor Volume
- 12 Buzzer Volume
- 13 User Language

English

- 14 Remote Diagnosis
- 15 TX Mode Default
- 16 No Toner Mem. RX
- 17 Mem. Full Save
- 18 Instant Dial
- 19 Restrict Access
- 20 ECM Function
- 21 Closed Network
- 22 Toner Save
- 23 Sender ID
- 24 1ST Paper Size
- 25 2ND Paper Size (requires 2nd paper tray fitted)
- 26 Power Save Mode
- 27 Relay Print
- 28 600 dpi function
- 29 ISDN Dial Mode (requires ISDN option)
- 30 Speech Receive (requires ISDN option)
- 31 Option Line Type (requires ISDN option)

Dial Options

- 40 Redial Tries
- 41 Redial Interval
- 42 Auto Start
- 43 Dial Tone Detect
- 44 Busy Tone Detect
- 45 MF/DP
- 46 Pulse Dial Rate
- 47 Pulse Make Rate
- 48 Pulse Dial Type
- 49 Duration MF (Tone)
- 50 PBX Line
- 51 Flash/Earth/Normal
- 52 Dial Prefix

Incoming Options

- 60 Incoming Ring
- 61 Remote Receive
- 62 T/F Timer Prg.
- 63 Continuous Tone
- 64 PC/FAX Switch
- 65 CNG Count
- 66 Ring Response
- 67 Distinctive Ring

Report Options

- 70 MCF. (Single-Loc.)
- 71 MCF. (Multi-Loc.)
- 72 Image in MCF.
- 73 Err. Report (MCF.)

LAN Options with network interface fitted

- 80 Auto Tray Switch
- 81 Paper size check
- 82 LAN Print T.O.
- 83 POP interval
- 84 Delete POP message
- 85 GMT time difference
- 86 Text Print
- 87 Header Print
- 88 Coding Print
- 89 Ex. Fine Mode
- 90 Ifax Sender ID
- 91 Domain Name
- 92 MDN
- 93 Network Setting
 - IP Address
 - Subnet Mask
 - Default Gateway
 - SMTP Server Address
 - SMTP Server Name
 - POP Server Address
 - POP Server Name
 - POP User ID
 - POP Password
 - DNS P.Server Address
 - DNS PS.Server address
 - Host Name
 - Fax Email Address
 - DSN
 - NIC Reset

 
 
 
Counter

- Drum Count
- Print Count
- Scan Count

Printer Cleaning



English



Appendix B - MFP PC Interface Kit

The Multifunction Peripheral (MFP) Interface Kit is an optional package for your facsimile transceiver. After installing the software provided in the kit into a host PC and connecting the PC to facsimile transceiver, the machine will be capable of printer, scanner and PC fax functions in addition to its normal operations. Your fax machine is equipped with a bi-directional parallel (IEEE 1284) communications port pre-installed for quick, simple connectivity and PC Fax functions.

PC printer

Printer driver	HIPER-W proprietary Windows printing system)
Compression mode	ACC32
Resolution	300 dpi, true 600 dpi
Printing speed	10 pages per minute (engine speed)
Paper size	
1st tray	A4, Letter, Legal 13, Legal 14, Executive, A5, A6, JIS B5
2nd tray (option)	A4, Letter, Legal 13, Legal 14, Executive, A5, A6, JIS B5
manual feed	A4, Letter, Legal 13, Legal 14, Executive, A5, A6, JIS, B5, Monarch, COM-10, DL, C5, COM-9
Media support	
envelopes/ transparencies	manual feed only and face up stacking
plain paper	automatic or manual
Paper weight	60-105 g/m ² (16-28 lb)
Paper feed	
1st tray	250 sheets
2nd tray (option)	500 sheets
manual feed	1 sheet



English

Output load	
face down	200 sheets
face up	10 sheets

PC scanner


Scanner driver	TWAIN compatible
Scanning mode	Line Art, 64-level error diffusion
Scanning sensor	CIS 300 dpi
Scanning area (H × V)	216 x 355.6 mm max.
Resolution (H × V)	8 dots x 3.85 lines/mm (standard) 8 dots x 7.7 lines/mm (fine) 8 dots x 15.4 lines/mm (ex. fine) 300dpi, 600 dpi interpolation
Document size (W × L)	148 x 100 mm min. * 216 x 355.6 mm max.

* Documents smaller than 148mm must be scanned using a carrier sheet.

PC fax modem

Command mode	Class 1 (EIA/TIA-578)
Transmission speed	14.4 kbps

 Note: For more detailed information and instructions on how to install and use the functions made available by MFP software please see the documentation provided with the MFP PC Interface Kit.



Appendix C - Internet Fax and Network Printer/Scanner Kit

The Internet fax and network printer/scanner kit is an optional package that enables this fax machine to operate as a network printer, network scanner and Internet fax. By installing an Ethernet network interface card and connecting the machine to a network, more than one computer in a network can use this fax machine as a printer, scanner and Internet fax.

Ethernet compatibility

The Ethernet interface card provides open-system compatibility. The following network operating systems and protocols are supported:

Novell

NetWare 3.x; NetWare 4.0 and 4.11 (NDS); R Printer and P Server; Auto attach/re-attach to file server.

Microsoft

Windows NT 4.0 (TCP/IP); Windows 95/98 (TCP/IP); Windows 2000 (TCP/IP); LPR support; Net Beui.

Network printer specifications

Printer driver	Hiper-W for Network
Network interface	10Base-T / 100Base-TX (auto-sensing)
Resolution	True 600dpi, 300dpi
Printing speed	10 pages per minute (engine speed)

Internet fax and network scanner

The Internet fax and network scanner (i.e., the transmission of received Internet faxes to personal computers) functions enable the fax machine function to be executed in an e-mail format by attaching the fax image to an e-mail as a TIFF (Tagged Image File Format) file. SMTP (Simple Mail

English

Transfer Protocol) is used for the sending protocol and POP3 (Post Office Protocol version 3) and SMTP for the reception protocol.

Transmission

An e-mail message is sent when an e-mail address is specified. This can be done either via one-touch keys or by direct entry. Mail can also be sent as a broadcast transmission using the normal operations and also sent to a group destination (group cannot include combinations of e-mail addresses and telephone numbers).

Reception

The e-mail is received in memory, making it necessary to check the unit for e-mail. This can be done in two ways:

1. Press Menu. Press **▲** key until INTERNET FAX appears, then select INTERNET RX and press START.
2. By setting the POP interval timer for regular checks.

Gateway function

E-mail to G3/G4 fax machine

The Internet fax (I FAX) function allows the unit to act as a gateway and forward received messages to designated G3 fax machines. This means that when an I FAX machine receives mail addressed to FAX=88-888-8888@gw.customername.co.uk, it transfers the fax message to this number.

This gateway function enables faxes to multiple destinations to be transferred from a single e-mail to the corresponding I FAX unit.

G3/G4 fax machine to E-mail

This function enables this fax machine to transfer fax messages it has received to mail boxes registered with an E-mail address. The mailbox is the same as that used for relay broadcasts. The flow consists of a G3 fax machine sending a message to the Internet Fax, which then forwards it to an E-mail address.

Note 1: *Format for transferring messages can be text and/or TIFF files. Any documents created in proprietary software packages (e.g. MS Word, WordPerfect, etc) cannot be transmitted.*

Note 2: This feature is only available on OKIFAX 5950 fax machines.

Registration

E-mail addresses, which are registered with the Fax2Net function (see Appendix G), can be registered in one-touch key numbers 1 to 40. The addresses can be up to 64 characters in length and must exclusively be e-mail addresses.

Primary user settings

POP Receiving Interval. This is the interval at which mail is checked (speed access No. 83).

E-mail deletion. This is used to select whether an e-mail is never deleted, an e-mail is deleted when it can be printed by the fax, or whether all e-mails are deleted (speed access No. 84).

Time difference. This indicates the time difference from GMT and is for the e-mail header (speed access No. 85).

Text printout. This is used to determine whether or not the mail text is printed out. This function can only receive or print text and/or TIFF files (speed access No. 86).

Header printout. This allows the user to select whether all, part or none of the e-mail header is to be printed (speed access No. 87).

E-mail coding. The user uses this to set the code for e-mail attachments (speed access No. 88).

Extra fine mode. This determines whether 300 dpi or 600 dpi will be used when EX.FINE is designated for TIFF (speed access No. 89).

Note: 600 dpi requires installation of the optional 8 Mb of memory.

Domain name. This is the address to which e-mails will be received. Other addresses will be rejected (speed access No. 91).

Note: A maximum of five domain names can be registered.

Primary network settings

Primary network settings can be accessed using speed access No. 93.

SMTP Server. IP address or server name (up to 64 characters) is registered.



English

POP3 Server. IP address or server name (up to 64 characters) is registered.

POP User ID. Up to 16 alphanumeric characters.

POP User Password. Up to 16 alphanumeric characters.

DNS Server. IP addresses of the primary and secondary servers..

Display message examples

Display during transmission

xxxxxxx@xxxxxxx.xx.xx
SENDING

Display during reception

 
 
 
xxxxxxx@xxxxxxx.xx.xx
RECEIVING

Display during broadcast transmission

BROADCAST
SENDING

Setup procedure

If this option has been fitted to the fax machine, please refer to the CD that came with the option for a detailed explanation of the setup procedure.



Appendix D - ISDN G4 Board

The ISDN G4 Board is an optional package which enables your machine to function as a digital facsimile transceiver conforming to Group 4 ITU-T recommendations. It is equipped with an automatic fallback feature that enables the machine to communicate in G3 mode when its G4 signal is rejected or a G3 signal is received.

This board also supports dual mode communication, which means that a G4 signal and a G3 signal can be received or transmitted simultaneously.

Main specifications

G3 mode

Network compatibility	ISDN, Circuit switch mode (PSTN not available when activated)	
Network interface	ITU-TI.430, ETS 300 012. Basic rate interface (2B+D), S/T interface, RJ45	
Compatibility	ITU-T G3(auto-fallback G4→G3)	
Transmission speed	33.6kbps max.	
Coding scheme	MH, MR, MMR (JBIG for OKIFAX 5950 only)	
Resolution	8 dots x 3.85 lines/mm 8 dots x 7.7 lines/mm 8 dots x 15.4 lines/mm 300 x 300 dots/inch	
Transmission time	2.5sec (ITU-T No.1 chart, 33.6 kbps, JBIG, 8 dots x 3.85 lines/mm)	
Error correction	ECM, page retransmission with redial	
CODEC	ITU-T G.71 (auto-select by country code)	
Network service	Calling line ID (CLIP)	Yes
	Sub-addressing (SUB)	Yes
	Multi-Subscriber No. (MSN)	Yes

English

Options	PC FAX (IEEE 1284 I/F)	TIA/EIA Class 1 (14,400kbit/s max.)
---------	------------------------	--

G4 mode

Network compatibility	ISDN, Circuit switch mode (PSTN not available when activated)	
Network interface	ITU-TI.430, ETS 300 012. Basic rate interface (2B+D), S/T interface, RJ45	
Compatibility	ITU-T G4 Class 1	
Transmission speed	64 kbps max.	
Coding scheme	MMR, JBIG (OKIFAX 5950 only)	
Resolution	200 x 100 dots/inch 200 x 200 dots/inch 300 x 300 dots/inch 600 x 600 dots/inch (requires optional 8 Mb installed)	
Transmission time	1.5 sec (ITU-T No.1 chart, 64 kbps, MMR, 200 x 100 dots/inch)	
Error correction	LAPB	
CODEC		
Network service	Calling line ID (CLIP)	Yes
	Sub-addressing (SUB)	Yes
	Multi-Subscriber No. (MSN)	Yes
Options	PC Fax (Bi-Centro I/F)	

Registration and important settings**Registration**

ISDN Country Code: This number is a terminal identifier (TID). Up to three numbers (the country code of the country in which the machine is being operated) can be registered. (Default setting.)

ISDN No.: This is the national subscriber number for the ISDN. Up to 20 numeric digits can be used. This number is used as a TID and for caller number information (CLIP) and checking MSN. (Default setting.)

ISDN ID: This number is a terminal identifier. Up to ten alphabetic characters (uppercase or lowercase) can be used. (Default setting.)

ISDN SUB: This is the sub-addressing number for directing communications. Up to 19 numbers can be used.

Please be sure to register the ISDN country code, ISDN number and ISDN ID into the fax machine. If these items are not registered ISDN service may be denied.

Settings

ISDN dial mode (user setting)

Set to G3: The call originates in G3 mode when dialled from the numeric keypad. At the time, 3.1 kHz analogue transmission is requested to the network.

Set to G4: The call originates in G4 mode when dialled from the numeric keypad. Non-restricted digital transmission is requested to the network. (default setting.)

ISDN dial mode (communication parameter)

Set to G3: The call originates in the G3 mode when dialled from Speed Dial entry. At the time, 3.1 kHz analogue transmission is requested to the network.

Set to G4: The call originates in G4 mode when dialled from Speed Dial entry. Non-restricted digital transmission is requested to the network. (default setting.)

Speech receive (user setting)

Set to OFF: Allows limited reception of analogue communications. The limitations when set to OFF depend on the ISDN network that the fax machine is connected to.

Set to ON: Enables the reception of analogue communications from the network.

Note: For analogue transmission capabilities, please contact your authorised supplier.

English

ISDN TSI/CSI

Some ISDN PBXs do not require the complete MSN to be programmed into the fax machine. Therefore, if the fax machine is fitted with the ISDN option, the TSI/CSI should be programmed as follows so that the correct identification is printed on received faxes at the remote fax machine:

1. Make sure that no documents are loaded into the ADF.
2. Press the MENU/EXIT key.
3. Use the ▼ key to select SETUP and press the ENTER key.
4. Use the ▼ key to select ID/PASSWORD PRG and press the ENTER key.
5. Enter + (One Touch key 39) followed by the country code (e.g. 44 for UK), then press the SPAVE key repeatedly until the ninth character is reached.
6. From the ninth character onward, enter the remaining digits of the subscriber number as per the following table.

G3 TSI Position																			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
+	4	4						2	1	3	1		3	6	5	9	0	9	

Other related functions

The following are functions incorporated to enhance faxing operations.

Automatic Fallback: If the G4 signal transmitted from the machine is rejected, the machine automatically retransmits the signal in G3 mode. Similarly, if a G3 signal is received for an incoming call, the machine will automatically switch to the G3 mode for the call.

Resolution Conversion: The resolution of a fax is converted according to that of the document and the capacity of the remote machine.

Coding Conversion: The coding scheme of the communication is converted according to that of the transmitting and receiving machines.

Call Origination: A number of ways are available for inputting and initiating transmissions, including manual and automatic.

English

Call Termination: This function provides immediate answering and the ability to select the type of termination setting (FAX, TEL, MEM, PC or FWD).

Direct Inward Dialling: A fax can be delivered directly to a specific terminal when multiple machines are connected to a single line.

Multiple Subscriber Number (MSN) Restriction: This function is used in combination with direct inward dialling to check if the number of the incoming call matches an MSN in the machine's database. If not, the call is rejected.

Sub-Address Service: Sub-addresses are most commonly used when faxing point-to-multipoint (P-MP). In addition to the telephone number of the remote location, the user must also know and input the sub-addresses of the terminals that the fax is directed to.

Display Message Examples

The following example messages occur during call-in-progress.

Calling sequence	ABC COMPANY †1 0334567890 †2
	CALLING †3
Fax transmission	ABC COMPANY †4
	PAGE 001 †5 SENDING G4/64.0K †6
Automatic reception	AUTO REC. START
Remote diagnosis	REMOTE DIAGNOSIS

Explanation of displayed text

- †1 If Speed Dial ID is played here.
- †2 Telephone number location (max. 40 characters)
- †3 Displayed after calling sequence starts (PSTN/ISDN)
- †4 Personal ID, TSI/TID for ISDN G4, phone no. of remote machine for phone no.



English

- †5 TX/RX page counter (000-999)
- †6 See following explanation for bottom line.

 
 
 
Bottom line of display (20 characters, left to right)

1st. 10 characters: Communication activity (e.g., sending, receiving, memory-receiving)

2nd. set of characters (2 characters): Communications mode (G3, G4)

3rd. set of characters (after /): Tx rate (e.g., 33.6K, 64K, 28.8K)

For more detailed information and instructions on how to set and use a machine when the ISDN G4 Board is installed, please refer to the documentation provided with the ISDN G4 Board.



Appendix E - G3 Dual Line Function

General information

This function enables communication to be conducted on two lines concurrently when the optional G3 board is mounted. This is basically the same function that is possible with the ISDN board. Selection and/or use of the alternative line is done automatically. All transmissions using the alternative line are done from memory.

Displays and reports

The display ordinarily shows the status of the main line; however, the alternative line can be shown by pressing the HELP key. Also, when two lines are in use, a buzzer indicating the end of the communication sounds for the displayed line. No sound is emitted when use of the line that is not shown ends.

Protocol dump and transmission result reports are generated for both lines. Use of the alternative line is indicated by a “#” mark.

Settings

 
 
 
 
 
The specific use of the alternative line can be set (TX/RX/ALL). Speed access 31.

1. When TX is set, it can only be used for outgoing calls.
2. When RX is set, it can only be used for incoming calls.
3. When ALL is set, it can be used for both.

Note: Both lines must be connected to the same type of line (PSTN or PBX).



English



Appendix F - 600 dpi Communication

This feature is available with both models of fax machines, but requires the optional 8 Mb memory to be installed. It can be selected using speed access No. 28.

Selection	Operation
ON (Default)	Allows 600 dpi resolution for transmission, reception and copying. Of the 8 Mb of memory, 4 Mb is used as a 600 dpi printing buffer or as a shared area for storing the image in memory. Note that, depending on memory status, 600 dpi resolution may not be used.
OFF	No 600 dpi resolution for transmission, reception or copying. Uses all of the 8 Mb memory for image storage.

The different modes of the fax machine and their corresponding resolution settings are shown below. 600 dpi communication is only possible when the EX FINE resolution is used.

G3 transmission

STD	8 x 3.85 l/mm
FINE	8 x 7.7 l/mm
EX FINE	8 x 15.4 l/mm
	300 x 300 dpi
	600 x 600 dpi
PHOTO	8 x 7.7 l/mm

G4 transmission

STD	200 x 100 dpi
FINE	200 x 200 dpi
EX FINE	300 x 300 dpi
	600 x 600 dpi
PHOTO	200 x 200 dpi

IFAX transmission






STD	200 x 100 dpi
FINE	200 x 200 dpi
EX FINE	300 x 300 dpi
	600 x 600 dpi
PHOTO	200 x 200 dpi



English

Copy

STD	8 x 3.85 l/mm
FINE	300 x 300 dpi
EX FINE	8 x 15.4 l/mm
	300 x 300 dpi
	600 x 600 dpi
PHOTO	300 x 300 dpi

     

Appendix G - Network Compatibility List

The networks which each country version of the fax machine is designed to work with and any notified networks which each country version of the fax machine may have internet working difficulties with are given in the following table.

	Country	Austria	Belgium	Denmark	Finland	France	Germany	Greece	Ireland	Italy	Luxembourg	Netherlands	Norway	Portugal	Spain	Sweden	Switzerland	UK
Country Version	Belgian	C	A	B	B	C	C	B	B	B	B	B	B	C	C	B	C	C
	British	C	C	C	C	B	C	C	C	C	C	C	C	C	C	C	C	A
	Danish	C	B	A	B	C	C	B	B	B	B	B	B	C	C	B	C	C
	Dutch	C	B	B	B	C	C	B	B	B	B	A	B	C	C	B	C	C
	French	C	C	C	C	A	C	C	C	C	C	C	C	C	C	C	C	B
	German	B	C	C	C	C	A	C	C	C	C	C	C	C	C	C	B	C
	Irish	C	B	B	B	C	C	B	A	B	B	B	B	C	C	B	C	C
	Italian	C	B	B	B	C	C	B	B	A	B	B	B	C	C	B	C	C
	Norwegian	C	B	B	B	C	C	B	B	B	B	B	A	C	C	B	C	C
	Portuguese	C	C	C	C	C	C	C	C	C	C	C	C	A	B	C	C	C
	Spanish	C	C	C	C	C	C	C	C	C	C	C	C	B	A	C	C	C
	Swedish	C	B	B	B	C	C	B	B	B	B	B	B	C	C	A	C	C

A = the fax machine is designed to work with the network of that country.

 
 
 
 
 
B = the fax machine is designed to work with the network of that country, but depends on physical and software switch settings.

C = network compatibility is possibly limited.

In the event of problems, contact the supplier in the first instance.



English



Appendix H - Fax2Net

Introduction

This appendix provides an explanation of the new Fax2Net Service functions incorporated into this fax machine as well as the function programming required before being able to use Fax2Net.

Fax2Net is a special fax communications service that gives users the convenience of utilizing the combination of a fax machine and Internet to send and receive data including e-mail messages and web page data. To use this service requires an agreement between the user and a Fax2Net Internet service provider who can offer this type of special fax communications.

Operations involving e-mail addresses and web page URLs require additional characters to enable such destinations to be registered into the fax machine. Therefore, a number of the One-Touch keys and the Unique key have had special characters assigned to them.

One-Touch keys

One-Touch key numbers 28 to 40 have been assigned special characters for use when registering/entering e-mail addresses and web page URLs. These keys can only be used to enter special characters when the Enter Character screen is shown on the control panel LCD. Characters assigned are as follows:

One-Touch key 28	,
One-Touch key 29	;
One-Touch key 30	DEL
One-Touch key 31	CAPS
One-Touch key 32	@
One-Touch key 33	—
One-Touch key 34	:
One-Touch key 35	/
One-Touch key 36	SPACE
One-Touch key 37	\
One-Touch key 38	.
One-Touch key 39	+
One-Touch key 40	PAUSE

English

1	2	3	4	5	6	7	8	9	10
Q	W	E	R	T	Y	U	I	O	P
11	12	13	14	15	16	17	18	19	20 UNIQUE
A	S	D	F	G	H	J	K	L	
21	22	23	24	25	26	27	28	29	30
Z	X	C	V	B	N	M	,	;	DEL
31	32	33	34	35	36	37	38	39	40
CAPS	@	-	:	/	SPACE	\	.	+	PAUSE

The CAPS function of One-Touch key 31 enables switching between upper and lowercase alphabetic letters for entering e-mail addresses and web page URLs.

Note: The default is *CAPS OFF* (i.e., lowercase letters) when the e-mail address or web URLs are shown on the LCD.

UNIQUE key

Two characters have been added to the characters assigned to the UNIQUE key on the numeric keypad for programming/entering e-mail addresses and web page URLs.

Tilde: ~ (substituted by -1 on LCD)
Percent %

The order of symbol display for the UNIQUE key is:

. _ " / @ \ ~ % ! # & ' () * + , - :
; = ? •

When programming IDs, the characters @ \ " _ ~ and % cannot be used.

When programming e-mail addresses and web page URLs, the characters •, umlaut or some Scandanavian characters cannot be used .

Features

There are different routes or operational sequences for transferring data using the Fax2Net and these routes are summarised below.

International faxing

Route: Fax machine (A) ► Fax2Net Server (P) ► Fax2Net Server (Q) ► Fax machine (B)

Connections between A and P and Q and B are through normal telephone services. Connection between P and Q is by the Internet

Fax data is sent from A to P. P searches for Q (the nearest server to the destination fax number) and sends the fax data to Q. Q then sends the fax data to B.

Fax to e-mail

Route: Fax machine (A) ► Fax2Net Server (P) ► Internet Mail Server (Q) ► Personal Computer (B)

Connection between A and P is through normal telephone services. Connections between P and Q and Q and B are by the Internet

The e-mail address is transmitted from A to P. P converts the fax data it has received into an attachment file for an e-mail and sends the e-mail to the destination address at Q. B then retrieves the e-mail through Q.

Note: *The Fax2Net server converts text into Tiff files to be sent as attachments to e-mail. If the size of the file exceeds 2 MB, it is possible that the e-mail may be divided and sent as more than one message. Please be careful of text volume.*

Virtual e-mail

Route: Personal Computer (A) ► Fax2Net Server (P) ► Fax machine (B)

Connection between A and P is by the Internet. Connection between P and B is through normal telephone services.

B is assigned a virtual e-mail address by P. E-mail is sent from A to P and converted into fax data. P then sends the fax data to B.

English

The following file types can be sent:

JPG	TIF	BMP
TXT	HTML	GIF
PCX	PDF	DOC
XLS	PPT.	

Web page retrieval

Request Route: Fax machine (A) ► Fax2Net Server (P)

Reception Route: Web Server (W) ► Fax2Net Server (P) ► Fax machine (A)

Connection between W and P is by the Internet. Connection between A and P is through normal telephone services.

A contacts P and notifies it of the URL address to which access is required and then disconnects. P accesses the web page and converts the information to fax data. P then contacts A and sends the converted fax data.

Prepaid card registration

Request Route: Fax machine (A) ► Fax2Net Server (P) ► Fax machine (A)

A contacts P and notifies it of prepaid card information using DTMF tone. P then responds by sending a registration results report back to A.

***Note:** Depending on the method of payment for the charge, there are cases when this function is not required.*

Relay broadcast

Request Route: Fax machine (A) ► Fax2Net Server (P) ► Destinations (B)

Groups can be registered in the Fax2Net server. By specifying the group on the fax machine, the Fax2Net server transmits the images to the respective destinations that are in that group.

Additional settings

The incorporation of the Fax2Net function requires the addition of various settings to this fax machine. An explanation of each of the settings is given below.

Menu - facsimile network

The new settings added for Fax2Net are located in the seventh level (Fax Network Programming) of LOCATION PROGRAMMING in the operations menu.

Fax2Net server telephone number

This is the telephone number (40 digit max) of the nearest Fax2Net server. When using a PBX, you must program in the dial prefix for accessing an external telephone line.

Account number

Each terminal registered with the Fax2Net Service is assigned an identification (account) number and a personal identification number (PIN). Please note that the account number has ten digits and the PIN has a maximum of four digits making a maximum of fourteen digits. Both account number and PIN are provided by the ISP who is providing the Fax2Net service.

For example: Account No. 2305818699, PIN 1234; then enter 23058186991234.

International prefix

This number (10 digit max) is used to determine when to start the Fax2Net service (3 prefixes can be registered). If the first segment of numbers in the destination telephone number match the registered number, dialling to the Fax2Net server is prompted.

If DIAL PREFIX for a PBX has been set, THEN the numbers following the DIAL PREFIX (and subsequent hyphen, blank or pause) are compared with the international telephone prefix. If these numbers match the registered number, dialling to the Fax2Net server is prompted.

However, if a "+" is registered in front of or after the international prefix, Fax2Net server is not called and the fax transmission becomes a normal international telephone call.

English

Programming Fax2Net settings

Follow these instructions to program the fax machine with the Fax2Net information required to use the Fax2Net server (i.e., Fax2Net server telephone number, account number and international prefix number).

1. Press MENU to enter the menu.
2. Press ▼ to select LOCATION PROGRAM and press ENTER or ►.
3. Press ▼ to select FAX NETWORK PRG. and press ENTER or ►.
4. Enter the server number (40 digits max) using the numeric keypad and press ENTER.
5. Enter the account number (14 digits max) using the numeric keypad and press ENTER.
6. Enter the international prefix number (10 digits max) using the numeric keypad and press ENTER.
7. Press the ◀ or STOP to return to the stand-by mode.

Note: A maximum of three prefixes can be registered.

Dial directories

This section explains how to program the new dial directories into the fax machine.

Note: The programming of e-mail addresses and web page URLs is only possible when an account number is programmed into the fax machine. If an account number is deleted after e-mail addresses and/or web page URLs have been registered, only the programming screen for telephone (fax) numbers can be accessed.

Programming One-Touch keys

The fax machine has 40 One-Touch keys that can be used for the rapid dialling of registered numbers. Up to 80 telephone (fax) numbers, a primary and alternate number for each One-Touch key, or 40 e-mail addresses or web page URLs (one per One-Touch key) can be registered. A 15-character location ID can also be entered for each One-Touch key (telephone (fax) numbers only). The e-mail addresses are for common use with I FAX addresses.

English

Telephone (fax) numbers: 40 digits maximum (numerals and symbols).

Location ID: 15 character maximums (uppercase alphabetic letters).

E-mail addresses: 64 characters maximum (upper and lowercase alphabetic letters, numerals and symbols).

Web page URLs: 64 characters maximum (upper and lowercase alphabetic letters, numerals and symbols).

Group registration

Mixing of e-mail addresses registered under One-Touch keys and telephone (fax) numbers registered under One-Touch and Speed Dial keys is prohibited when registering a group. It is not possible to use One-Touch keys that have web page URLs registered. If an attempt is made to register a web page URL in a group, the warning **ILLEGAL OPERATION** will be displayed.

Note: To find One-Touch and Auto Dial keys not yet registered, use the **SEARCH** key function.

Programming

Telephone (fax) numbers

1. Press **MENU** to enter the Menu.
2. Press **▼** to select **LOCATION PROGRAM** and press **ENTER** or **►**.
3. Select **Speed Dial** and press **ENTER** or **►**.
4. Select the speed dial number required using the numeric keypad or **▼** and press **ENTER** or **►**.
5. Select **TEL. NO.** and press **ENTER**.
6. Enter the **LOC. NO.** using the numeric keypad and press **ENTER**.
7. Enter the **NAME** and press **ENTER**.
8. Enter **ALT NO.** using the numeric keypad and press **ENTER**.
9. Select **COMMUNICATION SPEED** using **▲** or **▼** and press **ENTER**.
10. Select **ECHO PROTECTION** using **▲** or **▼** and press **ENTER**.
11. Select **ISDN DIAL MODE** and press **ENTER**.

English

Note 1: If *ILLEGAL OPERATION* is displayed when a speed dial number is entered then that speed dial number is use or assigned to batch transmission. A different speed dial number has to be selected.

Note 2: Programming a telephone number to a One-Touch key already programmed with an e-mail address or web page URL will delete the e-mail address or web page URL.

E-mail addresses

1. Press MENU to enter the Menu.
2. Press ▼ to select LOCATION PROGRAM and press ENTER or ►.
3. Select Speed Dial and press ENTER or ►.
4. Select the speed dial number required using the numeric keypad or ▼ and press ENTER or ►.
5. Select E-MAIL ADDRESS using ▼ and press ENTER.
6. Enter the e-mail address and press ENTER.

Note: Programming an e-mail address to a one-touch key already programmed with a telephone number or web page URL will delete the telephone number or web page URL.

Web page URLs

1. Press MENU to enter the Menu.
2. Press ▼ to select LOCATION PROGRAM and press ENTER or ►.
3. Select SPEED DIAL and press ENTER or ►.
4. Select the speed dial number required using the numeric keypad or ▼ and press ENTER or ►.
5. Select WEB URL using ▼ and press ENTER.
6. Enter the web page URL and press ENTER.

Note 1: "http://" is pre-programmed.

Note 2: Programming a web page URL to a one-touch key already programmed with a telephone number or e-mail address will delete the telephone number or e-mail address.

Programmed dialling using numeric keypad

1. Enter the telephone (fax) number using the numeric keypad.
2. Press SPEED DIAL/SEARCH. The display will show SPEED DIAL NO.[xxx].
3. Press ENTER. The display will show LOC#:xxxxxxxxxx.
4. Press ENTER. The display will show NAME:.
5. Enter the location ID and press ENTER.
6. Information is written to memory.

Note 1: Pressing the START key after entering the telephone (fax) number will set the fax machine to dialling or memory scanning mode.

Note 2: Speed Dial numbers not yet programmed with a destination will be displayed consecutively when the SEARCH key is pressed repeatedly.

Note 3: If an account number is deleted, One-Touch keys to which an e-mail address or web page URL have been registered will not be displayed.

Note 4: Pre-feeding of documents to be faxed is prohibited.

Note 5: COPY key is disabled in some function communication modes (e.g., specified time, broadcast, confidential, relay, polling, etc.).

Note 6: SPEED DIAL/SEARCH is disabled if the number entered is more than 40 digits long.

Note 7: If no locations are available, the display will show NO LOCATION AVAILABLE.

Web page print request

1. Press MENU to enter the Menu.
2. Press ▼ to select FAX2NET and press ENTER or ►.
3. Select WEB RETRIEVAL and press Enter or ►.
4. Press SPEED DIAL/SEARCH and enter either the first character or a speed dial number. Press START to dial and the machine will return to the stand-by mode.

OR

English

Press the One-Touch key number for the desired web page URL and press START. The machine will return to the stand-by mode.

Note: When the specified Speed Dial No. has not been programmed with information, **NOT PROGRAMMED** will be displayed.

Broadcasting request

1. Press MENU to enter the Menu.
2. Press ▼ to select FAX2NET and press ENTER or ►.
3. Select BROADCASTING and press ENTER or ►.
4. Enter the broadcast list number and press ENTER.
5. Press START to dial.

Note: The broadcast list has to be registered in the Fax2Net server.

Registering prepaid card

1. Press MENU to enter the Menu.
2. Press ▼ to select FAX2NET and press ENTER or ►.
3. Select PREPAID CARD REG. and press ENTER or ►.
4. Enter the card number and press ENTER.
5. Press START to dial.

Basic operations

The following operations can be carried out using this fax machine in combination with the Fax2Net Service.

Single location transmission

International destinations

The fax machine will check the destination telephone number prior to dialling and determine whether or not to use the Fax2Net function. If all data matches correctly, the number is dialled as a Fax2Net server telephone number. However, if any one of the Fax2Net server telephone, account or international telephone prefix numbers have not been programmed, the communication will be treated as a normal G3 fax transmission and the destination telephone number dialled directly. If the

English

communication is not transmitted successfully, an error report is sent from the server at no expense to the user. However, if a summarized report of all communications, normal or otherwise, is desired, please contact a service representative. This service is normally billed separately as an additional charge.

For incomplete transmissions, please check the following:

- If the destination telephone number is comprised of a dial prefix and international telephone number only, the fax machine will not dial the number, but display a dialling error.
- If the Fax2Net server does not respond or is busy, the current communication is handled as a regular fax transmission and put into the dialling queue.
- If the information is not sent correctly or the account has expired, the connection is interrupted and the fax machine displays a warning on the control panel or sounds an audio alarm.
- If CHECK ACCOUNT NO. is shown on the LCD display, the account number may have been entered incorrectly. If the correct number was entered, please contact the nearest service representative.
- An alarm occurrence when switching to T.30 protocol is treated the same as with normal G3 communications.
- Communication with the Fax2Net server is not possible with Close Network communications set to ON. Make sure the setting is OFF when using Fax2Net function.

Normal telephone service connection

If the fax machine is connected directly to a normal telephone service (PSTN) and the receiving fax machine is located at an international destination, the communication will be transmitted via a general international telephone circuit if a "+" sign is entered before or after the international prefix number (i.e., Fax2Net will not be used).

For example: If the international prefix is 900 and the telephone number entered is 900 81 3 1234 5678, the communication will be transmitted to the receiving fax machine (81-3-1234-5678) via Fax2Net. However, if the telephone number is entered as +900 81 3 1234 5678 or 900+ 81 3 1234 5678, the communication will be transmitted through the normal international telephone circuit. Use this method if Fax2Net service is not required.

English

Note 1: Communications made using chain dialling do not use Fax2Net for direct transmission.

Note 2: If Fax2Net is to be used, do not add the "+" sign to the telephone number.

Note 3: When sending a communication using the numeric keypad to enter the telephone (fax) number, do not enter the "+" sign as the first digit.

PBX connection

If the fax machine is connected directly to a PBX, be sure to enter the dial prefix. The procedures are the same as listed above for connection to a PSTN.

If the "+" sign is entered either before or after the international dialling prefix, Fax2Net will not be used as given above.

For example: If telephone number entered is 9 900 81 3 1234 5678, the communication will travel through the extension and be transmitted to the receiving fax machine (81-3-1234-5678) via Fax2Net. However, if the telephone number is entered as +9 900 81 3 1234 5678 or 9 900 +81 3 1234 5678, the communication travels through the extension but is transmitted through the normal international telephone circuit. Use this method if Fax2Net service is not required.

Fax2Net can be used if the EARTH/FLASH is set up for PBX (international prefix = 900). If the telephone number dialled is -90081312345678, Fax2Net will send the communication to 81312345678. Please make sure that a "-" is added to the server telephone number when Earth/Flash is engaged.

Note: This setting depends on the country in which the fax machine is being used.

Domestic long-distance calls

If a domestic long-distance call is to be made using Fax2Net, please register the international prefix, your country code and the telephone number you are calling (excluding the 0 of the area code).

E-mail addresses

If the user presses a One-Touch key that is programmed with an e-mail address, the fax machine dials the Fax2Net server. If any one of the Fax2Net sever telephone, account or international telephone prefix

English

numbers have not been programmed, entering of an E-mail address as a destination will not be accepted.

However, if the user wants to send an e-mail that has not been programmed into the One-Touch keys, the following steps are carried out:

1. Load the document into the document feeder.
2. Press the MENU key.
3. Press ▼ to select INTERNET FAX, which can only be selected if a Fax2Net account is registered.
4. Type in the e-mail address using the One-Touch keypad.
5. Press the START key.

Note: *It is not possible for the user to delete any communications registered with the Fax2Net server when the fax machine is in either Redial Wait or Delayed Transmission mode.*

For incomplete transmissions, refer to international destinations above.

Broadcast transmission

Broadcast transmissions can be carried out using a combination of telephone numbers and e-mail addresses. However, if Fax2Net server information is not correctly programmed into the fax machine, e-mail addresses cannot be specified as broadcast locations.

Locations are dialled one at a time in the broadcast mode. Even if multiple telephone numbers or e-mail addresses are included, the fax machine will dial the Fax2Net server and transmit locations one at a time (i.e., multiple destinations are not notified to the server en masse). Transmission is considered complete upon confirmed reception from the Fax2Net server.

Note: *One-Touch keys assigned to web page URLs cannot be programmed for broadcast transmissions.*

Web page print

The web print function can be initiated using the Function operation (8: Fax2Net Service). The fax machine contacts the Fax2Net server, informs it of the web page address, disconnects the line, and then returns to Standby mode. Once the Fax2Net server has acquired the data of the web page requested, it converts the information to fax format and sends it to the fax number from which the request originated using regular G3 facsimile protocol.

English

Note: *If a web page URL has not been registered nor the proper Fax2Net information programmed into the fax machine, this feature is not functional.*

For incomplete transmissions, check the following:

- If the Fax2Net server does not respond or is busy, the fax machine enters the Redial mode.
- No alarm will occur even if the web page information has not been sent by the Fax2Net server for some unknown reason.

Prepaid card registration

Prepaid card registration can be initiated using the Function operation (8:Fax2Net Service). After selecting the function, enter the card number when the display shows card number request. Each card number consists of a maximum of 16 digits (entry of up to 20 digits is possible). The fax machine contacts the Fax2Net server and informs the server of the account ID and card number. The Fax2Net sever responds by transmitting a registration results report back to the fax machine. The fax machine receives the registration results report from the Fax2Net sever in the form of a polling operation. The card number is not maintained in memory and this communication is recorded in the Activity Report. An entry is not made in the Message Confirmation Report.

Note 1: *If information is sent incorrectly or the account has expired, the connection is ended and the fax machine display shows an error message and an audio alarm is given.*

Note 2: *If there is no reply from the Fax2Net server or an interruption due to power outage, the fax machine will not redial.*

PBX setting

Make sure to register the dial prefix number when the PBX setting is "ON."

Polling transmission

Polling transmission is possible, however, the fax machine does not dial the Fax2Net server for this operation (i.e., communications are conducted using PSTN).

Function restrictions

The following are basic function restrictions that apply when using Fax2Net Service.

- If a user attempts to use One-Touch keys in Confidential Transmission, Relay Initiate Transmission, Polling Receive, Pre-Dial Chain Dial or Real-Time Dial, ILLEGAL OPERATION will be displayed.
- If there is no account number, only normal fax calls are possible.
- If an account number is deleted after a group has been programmed, any corresponding numbers/addresses registered under One-Touch keys are deleted from the group location.
- After the selected location has been displayed and START key pressed, if no document has been loaded, LOAD DOCUMENT message will be displayed.
- Neither e-mail addresses or telephone numbers can be located using the SEARCH function. However, a registered web page URL can be searched by selecting Web Print from the menu.
- PC Fax Mode: The Fax2Net function is disabled when sending faxes using the PC FAX mode. The international telephone prefix is not checked prior to dialling.
- Location Search Function: The fax machine is not prompted to search the e-mail address or web page URLs when a location search is conducted using the SEARCH key.

The following restrictions apply when programming telephone numbers from a computer.

- E-mail address or web page URLs cannot be registered/changed to One-Touch keys in the telephone number programming application in the computer.
- One-Touch keys assigned an e-mail address or web page URLs appear as if they are not programmed in the computer when programming telephone numbers.



English

Reports

The formats of the following reports have been altered for use with Fax2Net from the original reports of the fax machine to provide information related to the functions and operations of the Fax2Net service.

Configuration report

The following items have been added to the configuration report.

- Telephone number of the Fax2Net server.
- Account number.
- International telephone prefix.

Telephone directory


Registered e-mail addresses and web page URLs are listed in the One-Touch keys section. Upper and lowercase characters are supported in the telephone directory to allow for e-mail addresses that use a combination of upper and lower case characters.

Activity report

E-mail addresses (up to 20 characters) and web page retrievals or print requests are listed in the DISTANT STATION ID column.

The following communications modes are added when Fax2Net is used:

International faxing	FNET
Fax to e-mail	FNET
Web page retrieval	WEB
Prepaid card registration	P-CARD

 

Index

Numerics

600 dpi communication . . 73, 115

A

Active memory files report. . . .77

Activity report77

Answering modes

Auto receive mode FAX . . .28

Forwarding mode (FWD) . . .29

Manual receive mode TEL . .28

Memory reception mode

(MEM)29

PC mode29

Setting29

Telephone answering device

(TAD)28

Telephone/fax automatic switch

mode (T/F)28

Auto receive mode FAX28

Auto start30

B

Basic operations

Cancelling messages in

memory47

Cancelling transmissions . . .45

Document preparation.41

Document size.41

Faxing to multiple locations .44

Faxing to single location. . .42

Loading documents.42

Making copies.48

Manual receive mode45

Memory reception.46

Messsage confirmation

report.45

Multiple page documents . . 41

No paper reception46

No toner reception.46

Printing from memory46

Real time dialling44

Redialling44

Rejecting faxes47

Search key dialling43

Broadcast entry report.76

Broadcast message confirmation

report.76

Broadcast transmission131

Busy tone detect30

Buzzer volume32

C

Call forwarding

Automatic64

On printer error64

On toner error64

Setting up.64

Chain dialling39

CNG count69

Component identification4

Confidential faxes

Changing password55

Closing mailbox55

Creating mailbox55

Mailbox password55

Printing56

Receiving.54

Sending54

Confidential reception report . .75

Configuration report76

Continuous tone32

Control panel.8

Copying documents.48

English

Counters

Accessing50

Resetting.....50

Current settings67

D

Date format (MYD/DMY).....72

Delayed transmission

Batch52

Cancelling52

Sending.....51

Dial directories.....124

Dial parameters

Auto start30

Busy tone detect.....30

Dial prefix31

Dial tone detect30

Flash/earth/normal31

MF duration31

PBX line.....31

Redial interval30

Redialling tries30

Tone/pulse (MF/DP)30

Dial prefix31

Dial tone detect30

Display messages.....106, 111

Distinctive ring70

Document jams81

Document originals

Jam clearing81

Loading42

Multi-page41

Preparation.....41

Size range.....41

Document stacker

Installing.....22

Document tray polling.....63

Dual access

During fax reception66

During fax transmission....65

When making copies66

When printing from memory 66

Dual line function.....73

E

ECM function.....68

Error messages92

F

Fax machine

Component identification...4

Components5

Control panel8

Features.....1

Indicators8

One-touch keypad.....10

Options3

Fax reception

Closed network.....47

Manual45

Memory.....46

Fax to e-mail.....121

Fax transmission

Multiple locations.....44

Single location42

Stopping45

Fax2Net119

Additional settings123

Basic operations128

Broadcast transmission...131

Broadcasting request.....128

Dial directories124

Fax to e-mail.....121

Features.....121

Function restrictions.....133

Group registration.....125

International faxing.....121

One-touch keys.....119

PBX setting.....132

Polling transmission132

Prepaid card

registration 122, 128, 132

Programmed dialling127

- Programming e-mail addresses126
- Programming one-touch keys124
- Programming settings124
- Programming telephone numbers125
- Programming web page URLs126
- Relay broadcast122
- Single location transmission128
- Unique key120
- Virtual e-mail121
- Web page printing127, 131
- Web page retrieval122
- Fax2Net service 66, 73
- Features1
- Flash/earth/normal31
- Forwarding mode (FWD)29
- Function list report76
- Function restrictions133
- Functions
 - Accessing15
 - Speed access15
 - Step access15
- G**
- G3 dual line function113
- Gateway function104
- Group directory report77
- Groups
 - Programming39
- H**
- Help key printout78
- I**
- Image drum replacing86
- Incoming call parameters
 - Continuous tone32
 - Incoming ring 31
 - PC/FAX switch 32
 - Remote receive 31
- Indicators 8
- Instant dial 68
- International faxing 121
- Internet fax 66
- ISDN
 - Automatic fallback 110
 - Call origination 110
 - Call termination 111
 - Coding conversion 110
 - Dial mode 33, 109
 - Direct inward dialling 111
 - G3 mode 107
 - G4 mode 108
 - Multiple subscriber number (MSN) restriction 111
 - Registration 108
 - Resolution conversion 110
 - Setting parameters 34
 - Specifications 107
 - Speech receive 33, 109
 - Sub-address 34
 - Sub-address service 111
 - Terminal ID 33
- ISDN G4 board 73
- L**
- Languages 32
- Local time/date print 72
- Long document scanning 72
- M**
- Manual (real-time) dialling 44
- Manual copying 49
- Manual receive mode TEL 28
- Memory full save 68
- Memory messages
 - Deleting 47
- Memory polling 62

English

Memory reception mode (MEM)	29
Menu	
Level 1	13
Level 2	14
Level 3	14
Level 4	14
Navigation	13
Speed access	15
Step access	15
Menu-facsimile network	123
Message confirmation report	32, 75
MF duration	31
MFP kit	72, 101
Monitor volume	32

N

Network print kit	
Internet fax	103
Network operating systems	103
Printer specifications	103
Network scanner	103
No paper reception	46
No toner reception	46

O

One-touch keypad	
Dialling	10
Programming	11
Searching	11
Second panel	12
Operation functions	
CNG count	69
Distinctive ring	70
ECM	68
Instant dial	68
Memory full save	68
Power save mode	69
Pulse dial rate	69
Pulse dial type	69
Pulse make ratio	69
Remote diagnosis	67

Restrict access	68
Ring response	69
Sender ID	68
T/F timer program	69
Transmission mode default	67
Options	3
600 dpi communication	73
Dual line function	73
Fax2Net service	73
ISDN G4 board	73
MFP Kit	72

P

Packaging for transport	94
Paper	
Face up/face down stacking	49
Jam clearing	81
Loading	24
Size setting	32
Paper jams	81
Passwords	
Memory	70
Restricted access	71
PBX dialling	34
PBX line	31
PC mode	29
PC/FAX switch	32
Polling	
Bulletin box	60
Cancelling faxes in memory	63
Creating mailbox	61
Document tray	63
Memory	62
Printing documents in memory	61
Printing faxes from memory	63
Reception	63
Setting bulletin polling	61
Polling transmission	132
Power failures	48
Power outage report	76
Power save mode	69

Prepaid card registration. 122, 132
 Primary network settings105
 Primary user settings105
 Printer cleaning.....50
 Printing
 Web pages..... 127, 131
 Printing from memory 46, 63
 Printing reports.....78
 Priority transmission.....53
 Problem checklist.....89
 Programming
 Dialling directories37
 Groups.....39
 Speed dial numbers.....38
 Protocol dump report78
 Pulse dial rate69
 Pulse dial type.....69
 Pulse make ratio69

R

Reading counters89
 Redial interval30
 Redialling44
 Redialling tries30
 Rejecting faxes47
 Relay broadcast122
 Relay broadcasts.....56
 Changing location.....59
 Changing password.....59
 Closing mailbox60
 Creating mailbox.....58
 Deleting location.....59
 Initiating57
 Passwords58
 Programming relay report
 destination.....58
 Sending57
 Remote diagnosis67
 Remote receive.....31
 Reports
 Active memory files77
 Activity77

Broadcast entry 76
 Broadcast message
 confirmation 76
 Communication codes 79
 Confidential reception 75
 Configuration..... 76
 Function list..... 76
 Group directory 77
 Help key printout..... 78
 Message confirmation 75
 Power outage..... 76
 Printing 78
 Printing configuration
 report 67
 Protocol dump 78
 Result codes..... 78
 Telephone directory..... 76
 Restrict access..... 68
 Ring response 69

S

Search key dialling 43
 Sender ID 27
 Sender ID (ON/OFF) 68
 Service functions
 Date format 72
 Long document scanning... 72
 Time/date print 72
 TSI print 72
 Setup
 Answering modes 29
 Document stacker 22
 External telephone..... 23
 Fax machine ID..... 27
 ISDN parameters..... 34
 Loading paper 24
 Paper size..... 32
 Telephone line connection. . 22
 Time and date 26
 Toner cartridge 20
 Signal tones..... 12
 Specifications 95

English

Speed dial numbers
 Chain dialling 39
 Programming 38
 Speed dialling 37

T

TEL/FAX timer 69
 Telephone
 External 23
 Line connection 22
 Telephone answering device
 (TAD). 28
 Telephone directory report. . . . 76
 Telephone/fax automatic switch
 mode (T/F) 28
 Time and date. 26
 Tone/pulse (MF/DP) 30
 Toner cartridge
 Installing. 20
 Toner cartridge replacing. 84

Transmission mode default . . . 67
 TSI print 72
 TSI/CSI. 27
 TSI/CSI Option. 27

U

Understanding reports 75
 Unpacking 19
 User functions tree 96

V

Viewing current settings. 67
 Virtual e-mail 121
 Volume
 Buzzer. 32
 Monitor 32

W

Web page retrieval 122

OKI SYSTEMS COMPANIES

Oki Systems (UK) Limited
 550 Dundee Road
 Slough Trading Estate
 Slough
 Berks SL1 4LE
 Tel: +44 (0) 1753 819 819
 Fax: +44 (0) 1753 819 899
<http://www.oki.co.uk>

Oki Systems (Ireland) Limited
 The Square Industrial Complex
 Tallaght
 Dublin 24
 Tel: +353 (01) 459 8666
 Fax: +353 (01) 459 8840
<http://www.oki.ie>
 Hawthorn Business Centre
 Adelaide Industrial Estate
 Falcon Road
 Belfast BT12 6HP
 Tel: +44 (01232) 572 355
 Fax: +44 (01232) 572 350
<http://www.oki.ie>